

De-Sensitive Overview

The Advanced Features supports de-sensitive (masking).

De-sensitive may be applied:

- On a TAP group
 - Ingress Port(s)
 - Ingress Link Aggregation Group
 - Ingress Port Group
- On a flow under the action section

The de-sensitive feature supports the following capabilities:

- Up to 64 models may be created
- May be configured as L2, L3 or L4
- The offset may be configured to be 0 to 64, even numbers
- The length may be configured to be 1 to 16 bytes
- The L3 checksum may be recalculated

De-Sensitive Setup

1. Select TAP Management.
2. Select De-sensitive.
3. Select + Add de-sensitive model.

The Add de-sensitive model panel will be displayed.

Add de-sensitive model
✕

de-sensitive ID

de-sensitive position ▾

de-sensitive offset

de-sensitive length

I3checksum recalculate ?

OK
Close

4. de-sensitive ID Enter the desired number, 1 to 64
5. de-sensitive position Select the desired position, L2,L3,L4
6. de-sensitive offset Enter the desired number, 0 to 62 even numbers
7. de-sensitive length Enter the desired number, 1 to 16
8. I3checksum recalculate Select the desired option, enable/disable
9. Select OK.

The De-sensitive model will be displayed

De-sensitive Config + Add de-sensitive model		
ID	de-sensitive model	Options
1	de-sensitive 1	✕

10. Select the de-sensitive model name.

The de-sensitive model detail panel will be displayed

de-sensitive model:de-sensitive 1 ✕

de-sensitive ID	de-sensitive position	de-sensitive offset (byte)	de-sensitive lenth (byte)	I3checksum recalculate
1	layer2	6	10	Enable

✕ Close

11. Select the Trash Can under the Options column to delete.

The de-sensitive model must not be applied to a TAP group or flow.