

The units are shipped with a default IP Management Address (10.10.10.200). Use the following procedure to change the IP Management Interface address, gateway and launch the GUI.

1. Connect a Serial cable from a COM port on the laptop or PC to the Serial Interface on the unit.
2. Launch Putty and configure the Serial connection as follows:

Speed (baud)	115200
Data bits	8
Stop bits	1
Parity	None
Flow Control	XON/XOFF

3. Press the Return key.
4. Enter enable.
5. Enter configure terminal.
6. To modify the IP Management Interface address and gateway, enter the following commands.

```
Switch(config)# management ip address xxx.xxx.xxx.xxx/mask
Switch(config)# management route gateway xxx.xxx.xxx.xxx
Switch(config)# exit
Switch# write
[OK]
```

7. Launch the Web Browser on the laptop or PC.
8. Enter the IP Address and press enter.
The GUI Login panel will appear.
9. Enter the Username and Password, (admin/gtadmin1).
10. Select Login.

The Device Summary panel will appear.