


This document describes the front panel, LED indications, interfaces, rear panel, installation procedure for the INT10G10SP1. The unit supports two span applications in a single chassis.

Front Panel

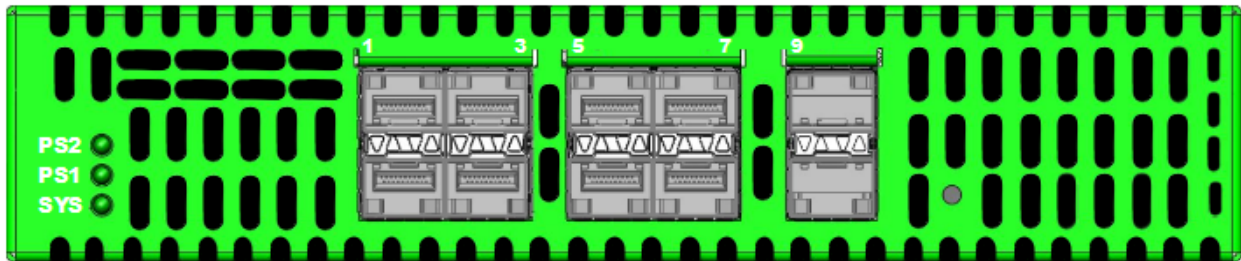


LED Indications

PS2	Power Supply 2 LED
PS1	Power Supply 1 LED
SYS	System LED
Up Arrows SFP Ports 1-9	Link/Activity LEDs
Down Arrows SFP Ports 2-10	Link/Activity LEDs

Interfaces

Port 1	Network Port	Ingress Span Port 3 / Port 5 / Port 7 / Port 9
Port 3	Span Port	Ingress Port 1
Port 5	Span Port	Ingress Port 1
Port 7	Span Port	Ingress Port 1
Port 9	Span Port	Ingress Port 1
Port 2	Network Port	Ingress Span Port 4 / Port 6 / Port 8 / Port 10
Port 4	Span Port	Ingress Port 2
Port 6	Span Port	Ingress Port 2
Port 8	Span Port	Ingress Port 2
Port 10	Span Port	Ingress Port 2

Rear Panel

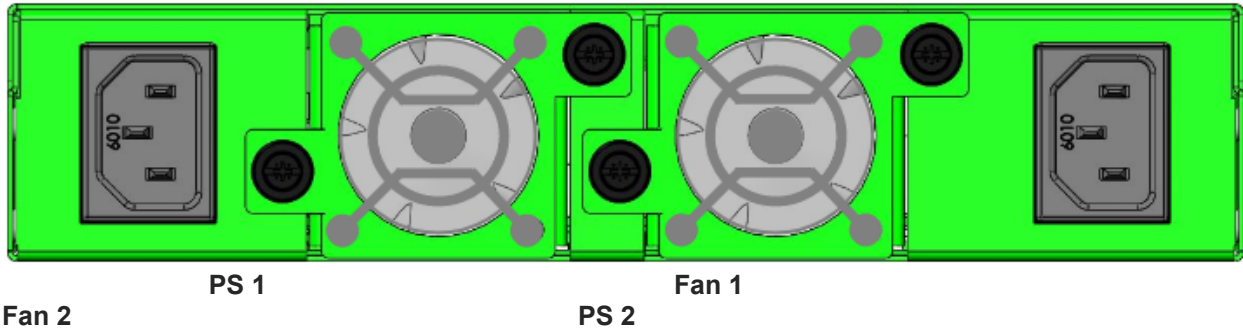

Installation Procedure

1. Connect power cables to PS1 and PS2 on the rear panel and plug into available power sources.
2. Verify that the PS1 LED and PS2 LED on the faceplate are illuminated.
3. Verify that the SYS LED on the faceplate is illuminated.
4. Connect the network ports for span1 and/or span2 to the desired sources.
5. Verify the link LEDs are illuminated indicating link.
6. Verify the activity LEDs are flashing indicating traffic.
7. Insert 10G SFPs into the desired monitor ports. This step can be done prior to power on if desired.
8. Connect the span ports for span1 and/or span2 to the desired source.
9. Verify the link LEDs are illuminated indicating link.
10. Verify the activity LEDs are flashing indicating traffic.