


PacketMAX™

Advanced Aggregator

User Guide By Garland Technology

GAA10G20AC

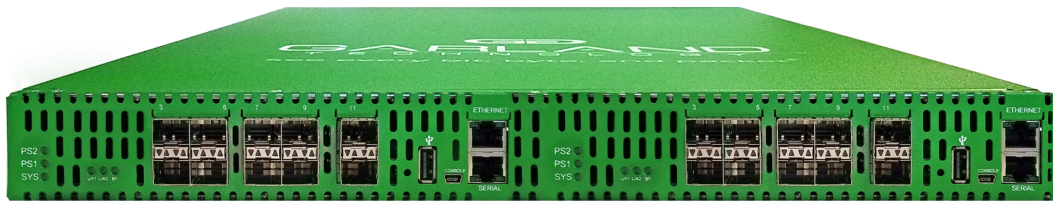

Garland Technology: Advanced Aggregation System
Firmware Rev Level: 1.14.3

Office: 716-242-8500

garlandtechnology.com/support

garlandtechnology.com

Copyright © 2021 Garland Technology, LLC. All rights reserved.

No part of this document may be reproduced in any form or by any means without prior written permission of Garland Technology, LLC.

The Garland Technology trademarks, service marks ("Marks") and other Garland Technology trademarks are the property of Garland Technology, LLC. PacketMAX Series products of marks are trademarks or registered trademarks of Garland Technology, LLC. You are not permitted to use these Marks without the prior written consent of Garland Technology.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Garland Technology and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied.


Table of contents

1. GAA10G20AC Introduction	3
2. GAA10G20AC Dashboard	3
3. GAA10G20AC System	4
4. GAA10G20AC Port Info	14
5. GAA10G20AC Packet Broker	16

1. GAA10G20AC Introduction

The GAA10G20AC is a unique device from Garland Technology that incorporates two separate units housed in the same chassis. The units have been designed to fit in a chassis that is only 13 inches deep. This allows the GAA10G20AC to be deployed in special applications. The chassis also provides the ability to power two units using two redundant power sources.

Each unit is managed independently allowing them to operate in separate applications providing 10x 1G/10G ports each. However, they are also connected together via 2x1G/10G internal ports that allow for traffic to be switched between the units providing 20x1G/10G ports.

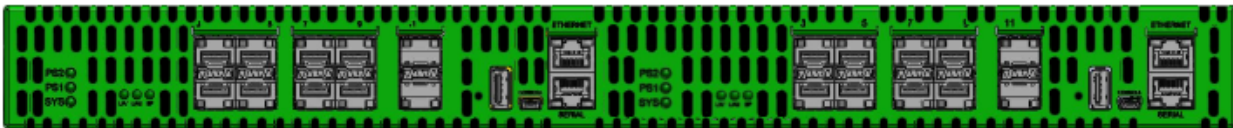


2. GAA10G20AC Dashboard

The Dashboard of the GAA10G20AC is divided into 2 sections.

1. System
2. Packet Broker

1. System


The System Section of the Dashboard consists of the following.

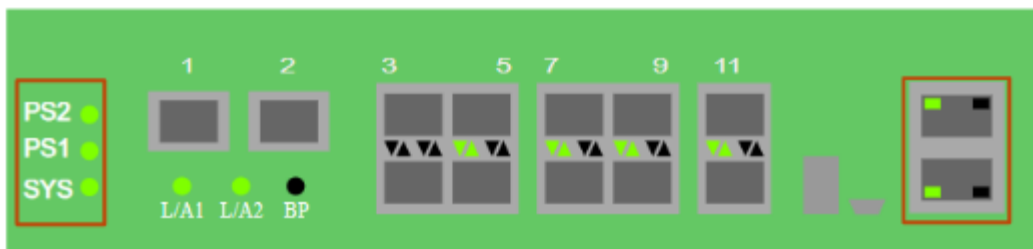

PS2	Power Supply 2 LED	Green indicates normal	Off indicates power not applied
PS1	Power Supply 1 LED	Green indicates normal	Off indicates power not applied
SYS	System LED	Green indicates normal	
Ethernet Interface	Upper Right LED	GUI always indicates Green	
Serial Interface	Lower Right LED	GUI always indicates Green	

2. Packet Broker

The Packet Broker Section of the Dashboard consists of the following.

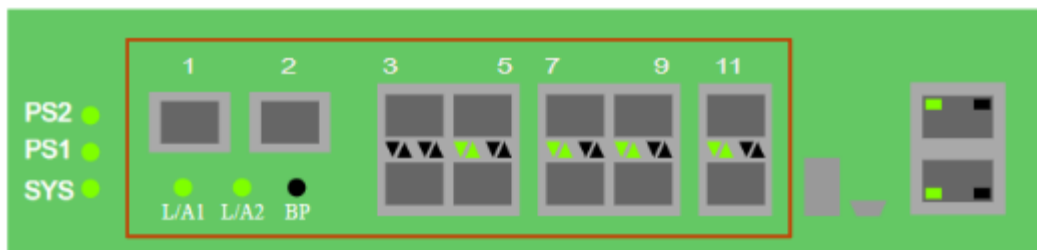


Port 1 L/A1
Port 2 L/A2
BP
Port 3 thru 11 (odd) Up Arrows
Port 4 thru 12 (even) Down Arrows

Link/Activity LED Activity LED N/A GUI
Link/Activity LED Activity LED N/A GUI
N/A
Link/Activity LED Activity LED N/A GUI
Link/Activity LED Activity LED N/A GUI

3. GAA10G20AC System

The following configuration options may be displayed, modified, enabled or disabled under the System panel.

- | | |
|---------------------|-------------------------|
| 1. System Info | 7. SNMP |
| 2. General | 8. Export Configuration |
| 3. Admin | 9. Import Configuration |
| 4. Network Settings | 10. Software Upgrade |
| 5. Date & Time | 11. Reboot |
| 6. Syslog | |

 

GAA10G20AC

Access the System panel by selecting System on the Dashboard Menu bar.



The System panel will be displayed. The System configuration options will be displayed on the left side of the System panel.

1 System Info

The System Information is displayed by default. The System Information panel displays the following.

- Chassis Name
- Chassis Model
- Chassis Serial Number
- MAC Address
- Software Version

2 General

The following configuration options may be displayed, modified, enabled or disabled.

- Chassis Name
- Key Press Timeout (secs)

1. Select General on the System panel.

The General System Settings panel will be displayed with the current configuration.

2. Select Edit Configuration.
3. Enter the desired Chassis Name.
4. Enter the desired Key Press Timeout (secs), (60-3600). The default is 60.
5. Select Save to save updates.
6. Select Cancel to return to the General System Settings panel.

3 Admin

The following configuration options may be displayed, modified, enabled or disabled.

- Groups
- Users
- Local Authentication
- TACACS Authentication

1. Select Admin on the System panel.

The Admin Settings panel will be displayed with the current configuration.

The default user is "admin/gtadmin1". The "admin" user privileges are defined by the default group "admin". Changes to the default user "admin" and group "admin" are allowed. However, the "admin" user or group "admin" may not be deleted.

3.1 Groups

The group defines the privileges for a user or group of users. A group may be used for local authorization or TACACS authorization. In Use “true” means that there is at least one local user assigned to the group. If a group is used by TACACS, the In Use will indicate “false”.

1. Select Groups + to create a new.

The Create New Group panel will be displayed.

2. Enter the Group Name.
3. Select the privileges for the new group.
4. Select Save to save updates.

5. Select Cancel to return to the Admin Settings panel.

The new group will be displayed on the Admin Settings panel.

6. Edit the group privileges by selecting the pencil.
7. Deleted the group by selecting the Red X. If a group has at least one local user assigned it cannot be deleted.

3.2 Users

If a user is created it is for local authorization. Users defined for use with TACACS are defined on the TACACS server.

1. Select Users + to create a new local user.

The Create New User panel will be displayed.

2. Enter the Username. (5-32 char, No spaces or special characters)
3. Enter the Password. (5-32 char, No spaces or special characters)
4. Select the group the local user will be assigned to.
5. Select Save to save updates.
6. Select Cancel to return to the Admin Settings panel.

The new local user will be displayed on the Admin Settings panel.

7. Edit the username, password or assigned group by selecting the pencil.
8. Delete the local user by selecting the Red X.

3.3 Local Authentication

Local authentication is only used by a local user. Local authentication may be enabled or disabled independently of TACACS authentication.

1. Select Authentication / Authentication Settings.

The Authentication Settings panel will be displayed. Local authentication is enabled by default.

2. Disable local authentication by deselecting Local Authentication. The local authentication may not be disabled if TACACS authentication is not enabled.
3. Select Save to save updates.
4. Select Cancel to return the Admin Settings panel.

3.4 TACACS Authentication

TACACS authentication is only used by a TACACS Server. TACACS authentication may be enabled or disabled independently of Local authentication.

1. Select Authentication / Authentication Settings.

The Authentication Settings panel will be displayed. TACACS authentication is disabled by default.

2. Select TACACS Authentication to enable.
3. Enter the TACACS Server IP Address.
4. Enter the TACACS Server Secret Word, (3-20 characters)
5. Select Save to save updates.
6. Select Cancel to return the Admin Settings panel.

3.4.1 TACACS Test

The TACACS Test option may be used to verify the authentication and authorization of a TACACS user and password. The TACACS Test option will be active only if TACACS authentication has been enabled and the TACACS server and secret word have been defined.

1. Select TACACS Test.

The TACACS Test panel will appear.

2. Enter the username to test on the TACACS server.
3. Enter the password to test on the TACACS server.
4. Select Test.

The GUI will display the results of the authentication, authorization, and authorization group of the user and password entered.

3.4.2 TACACS Ping

The TACACS Ping option may be used to verify the network connectivity from the unit to the TACACS server. The TACACS Ping option will be active only if TACACS authentication has been enabled and the TACACS server and secret word have been defined.

1. Select TACACS Ping.

The GUI will display the results of the ping sent to the TACACS server defined on the TACACS authentication panel.

4 Network Settings

The following configuration options may be displayed, modified, enabled, or disabled.

Network Settings	DHCP
	IP Address
	Mask
	Gateway
	DNS 1
	DNS 2

Add SSL Certificate

4.1 Network Settings

Any change made to any network setting option could cause network connectivity disruption for about 60 seconds.

1. Select Network Settings on the System panel.

The Network Settings panel will be displayed with the current configuration.

2. Select Edit Settings.

The Edit Network Settings panel will appear.

3. Enable DHCP. Select to enable. Default is disabled.
4. Enter the unit Management IP Address. This is usually performed at turn up. Use caution if changing as the unit may become unreachable.
5. Enter the Mask. This is usually performed at turn up. Use caution if changing as the unit may become unreachable.
6. Enter the Gateway. This is usually performed at turn up. Use caution if changing as the unit may become unreachable.
7. Enter the desired DNS 1 address.
8. Enter the desired DNS 2 address.

9. Using Uploaded SSL Certificate. Default is disabled. Enabled if an SSL certificate and key have been uploaded to the unit using the Add SSL Certificate option on the Network Settings panel. Disable to use of the unit-generated SSL certificate.

10. Select Save to save updates.

11. Select Cancel to return the Network Settings panel.

4.2 Add SSL Certificate

Uploading a custom SSL certificate involves two files. The certificate file and key file. The unit will consider these files during the upload. If the files do not match or one of the files is corrupted the unit will abort the upload. Result messages will be displayed in the GUI. Adding an SSL certificate will cause the GUI to restart. This could take up to 90 seconds. It may be required to refresh or restart the web browser.

1. Select Network Settings on the System panel.

The Network Settings panel will be displayed.

2. Select Add SSL Certificate.

The Select Certificate and Select Key File panel will appear.

3. Select Choose File for Select Certificate.

4. Select the desired file.

5. Select Open.

6. Select the Choose File for Select Key File.

7. Select the desired file.

8. Select Open.

9. Select Upload.

10. Select Restart Import to select a different certificate or key file.

11. Select Cancel to return to the Network Settings panel.

12. Login to the unit via the GUI.

13. Select Network Settings on the System panel.

14. Verify the SSL Certificate Loaded displays true.

15. Verify the Using Uploaded SSL Certificate displays true.

5 Date & Time

The following configuration options may be displayed, modified, enabled or disabled.

Timezone	Time
UTC	Date
NTP	

1. Select Date & Time on the System panel.

The Date & Time Settings panel will be displayed with the current configuration.

2. Select Edit Settings.

The Date & Time Settings panel will be displayed.

3. Select the desired Timezone.

4. Select the desired UTC. The UTC option is defined based on the Timezone selected.

5. NTP Timing may be enabled as desired.

6. If NTP Timing is not desired, local timing preferred enter the Hour: Minute.

7. If NTP Timing is not desired, local timing preferred enter the Month/Day/Year

8. Use Pool may be selected for NTP Timing. If Use Pool is selected, then no IP Address is required.

9. An IP Address may be entered for the NTP Timing source if Use Pool was not selected. If Use Pool is selected and an IP Address is entered, the unit will follow the Use Pool option.

6 Syslog

1. Select Syslog on the System panel.

The Syslog Configuration panel will be displayed with the current configuration.

2. Select Edit Settings.

3. Enable Syslog Config.

4. If desired enable the Unit ID. The Unit ID will be sent as part of any Syslog message from the unit.

5. Enter the desired Unit ID, (0-999).

6. Select the desired Protocol. Default is UDP, (UDP-TCP).

7. Enter the IP Address of the Syslog server.

8. Enter the Syslog Port Number. Default is 514, (0-65535).

9. Select Save to save updates.

10. Select Cancel to return the Syslog Configuration panel.

11. Sys Log Test may be selected to send a test message to the Syslog server.

7 SNMP

1. Select SNMP on the System panel.

The SNMP Configuration panel will be displayed with the current configuration.

2. Select Edit Configuration.

The SNMP Configuration panel will be displayed.

3. Select Enable SNMP Config.

7.1 SNMPv2

1. Enter the Access Port number. Default is 161.
2. Enter the Trap Port number. Default is 162.
3. Enter the Trap IP Address.
4. Select the Protocol, (V2 Read/Write, V2 Read Only).
5. Enter the V2 Community Password. Default is abc, (1-20 characters)
6. Select Save to save updates.
7. Select Cancel to return the Syslog Configuration panel.
8. SNMP Test may be selected to send a test message to the SNMP server.

7.2 SNMPv3 MD5/DES

1. Enter the Access Port number. Default is 161.
2. Enter the Trap Port number. Default is 162.
3. Enter the Trap IP Address.
4. Select the Protocol, V3.
5. Enter the V3 User.
6. Select the V3 Auth Type, MD5.
7. Enter the V3 Auth Password, (8-20 characters).
8. Enter the V3 Priv Password, (8-20 characters).
9. Select the V3 Priv Protocol, DES.
10. Select Save to save updates.

11. Select Cancel to return the Syslog Configuration panel.
12. SNMP Test may be selected to send a Test Message to the SNMP Server.

7.3 SNMPv3 SHA/AES

1. Enter the Access Port number. Default is 161.
2. Enter the Trap Port number. Default is 162.
3. Enter the Trap IP Address.
4. Select the Protocol, V3.
5. Enter the V3 User.
6. Select the V3 Auth Type, SHA.
7. Enter the V3 Auth Password, (8-20 characters).
8. Enter the V3 Priv Password, (8-20 characters).
9. Select the V3 Priv Protocol, AES.
10. Select Save to save updates.
11. Select Cancel to return the Syslog Configuration panel.
12. SNMP Test may be selected to send a test message to the SNMP server.

8 Export Configuration

1. Select Export Configuration on the System panel.

The Export Configuration panel will be displayed.

2. Select Export.

The config file will be downloaded to the default download destination of the browser.

9 Import Configuration

1. Select Import Configuration on the System panel.

The Import Configuration panel will be displayed.

2. Select Choose File for the Select Config File option.
3. Browse to and select the desired Config File.
4. Select Open.

5. Select Upload.

The unit will verify if the selected file is a valid Config file.

6. Select Configure.

The unit will import and load the Config file. An “import done” message will be displayed when complete. A reboot is not required.

10 Software Upgrade

The existing unit configuration will not be affected during firmware upgrades. It may be required to refresh or restart the web browser after a firmware upgrade is complete.

1. Select Software Upgrade on the System panel.

The Update Firmware panel will be displayed.

2. Select Choose File for the Select File option.

3. Browse to and select the firmware file.

4. Select Open.

The new firmware file will be displayed.

5. Select Upload.

The unit will validate the firmware file.

The unit will install the firmware file.

The unit will reboot.

6. After the upgrade is complete. The GUI will refresh to the Login panel.

11 Reboot

A reboot will affect traffic for about 25 seconds.

1. Select Reboot on the System panel.

The Reboot Device panel will be displayed.

2. Select Reboot.

The unit will present an “Are you sure?” message.

4. Select OK.

A “rebooting” message will be displayed.

A “Session timed out. Go to Login screen” message will be displayed.


5. Select Go.

The Login panel will be displayed.


4. GAA10G20AC Port Info

The following configuration options may be displayed, modified, cleared or refreshed under the Port Info panel.

1. Port Number
2. Port Description
3. Link
4. Set Speed
5. Speed
6. Mode
7. SFP Data
8. Split
9. Port Statistics

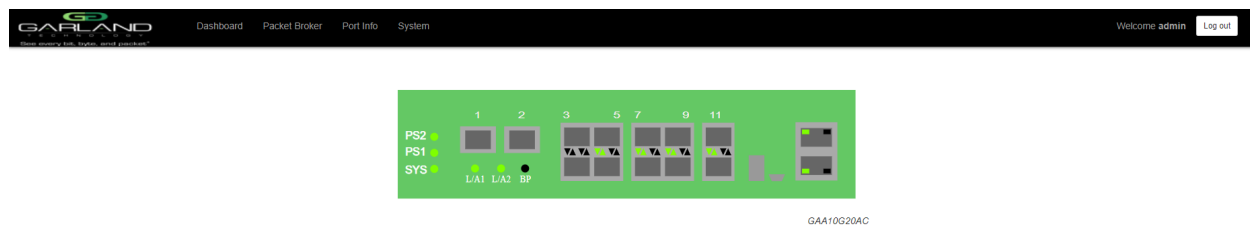

Access the Port Configuration panel by selecting Port Info on the Dashboard menu bar.

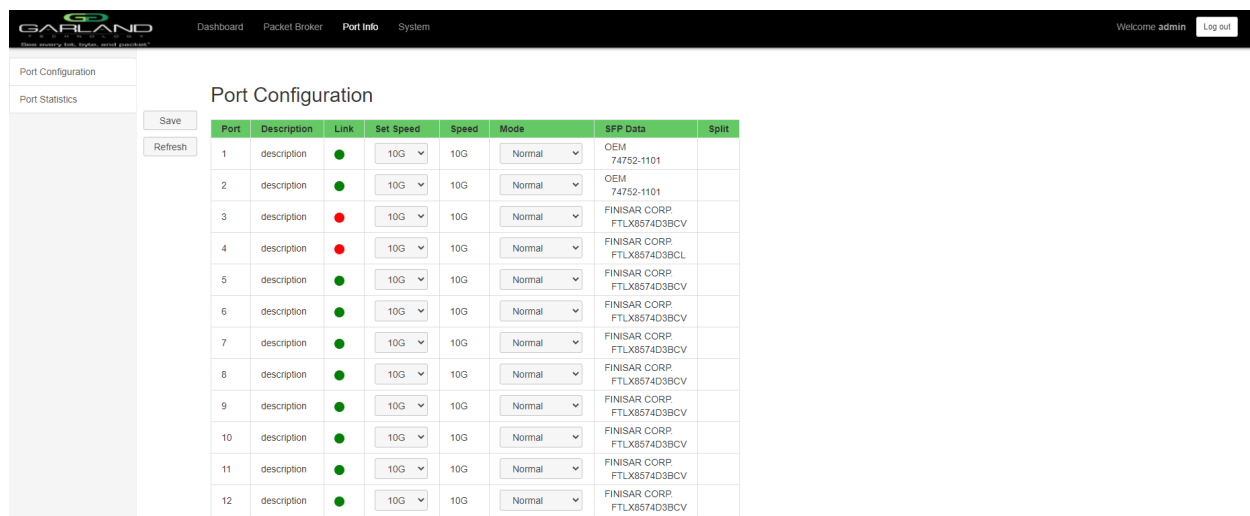

The Port Configuration panel will be displayed.

1 Port Configuration

The port configuration is displayed by default. The Port Description, Set Speed, and Mode may be modified. All other options are displayed only. However, they may be updated by selecting Refresh.

1.1 Port Description

1. Modify the port description by placing the cursor on Port Description for the desired port and press the left mouse button.

The Edit Description panel will be displayed.

2. Place the cursor in the description field and enter the new description.
3. Select Set to save updates.
4. Select Cancel to return to the Port Configuration panel.

1.2 Set Speed

1. Modify the port speed by selecting the pull down panel for the desired port.
2. Select the desired speed.
3. Select Save to save updates.

1.3 Mode

1. Modify the port mode by selecting the pull down panel for the desired port.
2. Select the desired mode. The available port modes are Normal, Loopback, Listen Only and Force Link.
3. Select Save to save updates.

2 Port Statistics

The following statistics may be displayed on the Port Statistics panel.

- | | | |
|---------------------|----------------------|--------------------|
| 1. Port number | 4. Receive Errors | 7. Transmit Errors |
| 2. Receive Packets | 5. Transmit Packets | |
| 3. Receive Discards | 6. Transmit Discards | |

1. Select Port Statistics on the Port Configuration panel.


The Port Statistics panel will be displayed.

2. Update the statistics by selecting Refresh.
3. Clear and refresh the statistics by selecting Clear.


5. GAA10G20AC Packet Broker

The following configuration options may be displayed, modified, enabled, or disabled under the Packet Broker panel.

1. Filter Templates
2. Load Balance Policy
3. Load Balance Groups
4. Config Maps
5. Statistics
6. Ingress Filters Resources (900)
7. Egress Filter Resources (256)

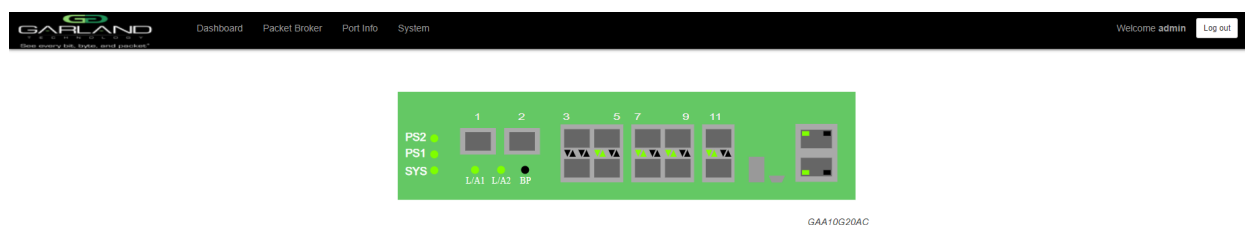

Access the packet broker panel by selecting Packet Broker on the Dashboard menu bar.

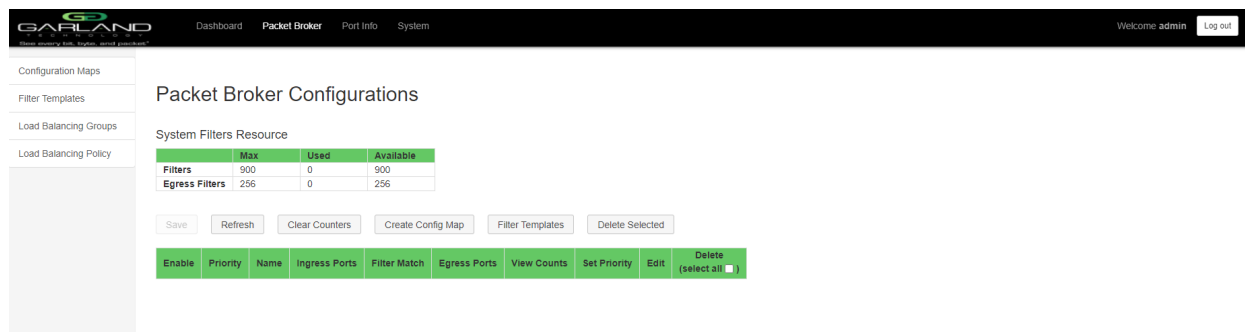

The Packet Broker Configurations panel will be displayed.

1 Filter Templates

Filter templates may be applied to config maps as an ingress filter or egress filter. A filter template may be created as a Pass All, Pass By or Deny By. Filter templates will also appear on the Create Config Map panel. Modifications to the filter template being used as an ingress filter or egress filter are allowed. Changes made to the filter template applied to a config map will not change the original filter template. Once the config map is saved, the filter template becomes an ingress filter or egress filter, thus, filter templates may be deleted even if used on a config map. It is advisable to rename a filter template applied to a config map if the original filter template was modified when applied to a config map.

1. Select Filter Templates on the Packet Broker Configurations panel.

The Filter Templates panel will be displayed.

2. Select Create Template.

The Create New Filter Template panel will be displayed.

3. Enter the filter name, (0-16 characters).

4. Enter the description, optional (0-64 characters).

5. Select the Template Type, Pass All, Pass By or Deny By.

6. If Pass By or Deny By was selected in Step 5, the filter options will be displayed as follows:

- Source MAC Address and Source MAC Mask, (optional)
- Destination MAC Address and Destination MAC Mask, (optional)
- Ether Type
- Source IP Address and Source IP Mask, (optional)
- Destination IP Address and Destination IP Mask, (optional)
- Inner VLAN ID (0-4094)
- Outer VLAN ID (0-4094)
- DSCP (0-63)
- IP Protocol (TCP, UDP or Other, (0-255))
- L4 Source Port (0-65535) or Range, (Minimum 0-65535 – Maximum 0-65535)
- L4 Destination Port (0-65535) or Range, (Minimum 0-65535 – Maximum 0-65535)

7. Select Save Template once all desired options have been enabled and defined.

8. The new filter template will appear on the Filter Templates panel.

9. The filter template may be modified by selecting the template name.

10. The filter template may be deleted by selecting the red X.

2. Load Balance Policy

The load balance policy determines the hashing applied to load balance groups. The load balance policy options are as follows and may be applied as L3 and/or L4 or L2.

- Ipv4 Source
- Ipv4 Destination
- L4 Source Port
- L4 Destination Port
- MAC Source
- MAC Destination

1. Select Load Balance Policy on the Packet Broker Configurations panel.

The Load Balance Policy panel will be displayed.

2. Select the desired load balance policy options.
3. Select Save to save updates.
4. Select Cancel to disregard changes.

3. Load Balance Groups

Load balance groups are used as the egress on config maps. The traffic applied to the ports assigned to a load balance group will follow the hashing per the load balance policy. Ports may be added or removed from load balance groups as desired. Load balance groups will also appear on the Create Config Map panel.

1. Select Load Balance Groups on the Packet Broker Configurations panel.

The Load Balancing Groups panel will be displayed.

2. Select Create Group.

The Create New Load Balance Group panel will be displayed.

3. Enter the name, (0-16 characters).
4. Enter the description, optional (1-64 characters).
5. Add ports by placing the cursor on the desired port. Select with the left mouse button. Drag the port to the New L.B. Group panel and release. Repeat for all desired ports. Ports may be added in any combination.
6. Remove a port by placing the cursor on the port in the New L.B. Group panel and double press the left mouse button.
7. Select Save to save updates.
8. Select Cancel to return to the Load Balancing Groups panel.

The load balance group will be displayed on the Load balancing Groups panel. The assigned ports will also be displayed.

9. Edit the load balance group by selecting the Edit for the desired group.
10. Deleted the load balance group by selecting the red X. Load balance groups may not be deleted if used to create a config map.

4. Config Maps

Config maps are unidirectional connections between ingress port(s) to egress port(s). Config maps may have one ingress filter or multiple ingress filters applied. Ingress filters may be modified as they are applied to a config map even if a filter template is used. Egress filters may be applied to egress ports and may be modified even if a filter template is selected.

1. Select Create Config Map on the Packet Broker Configurations panel.

The Create Config Map panel will be displayed. Any previously created load balance groups or filter templates will be displayed. Any port shaded grey can be used for a config map.

The screenshot shows the 'Create Config Map' panel in the Packet Broker Configurations interface. The panel includes the following elements:

- Name:** A text input field with a pencil icon for editing.
- Description:** A text input field with a pencil icon for editing.
- Available Filters:** 888/900
- Available Egress Filters:** 256/256
- Ports:** A grid of 12 ports (01-12) with 01-06 shaded grey and 07-12 white.
- Load Balancing Groups:** A section with a 'New' button.
- Filter Templates:** A section with a 'New' button.
- Diagram:** A flow diagram showing the connection from Ingress to Filter to Egress. A blue arrow points from Ingress to Filter, and a green arrow points from Filter to Egress.
- Buttons:** 'Clear Map', 'Save', and 'Reset' buttons are located to the right of the diagram.

2. Select the Name pencil to apply a name, optional.
3. Place the cursor in the Name panel and enter the name, (1-16 characters).
4. Select the Check to apply updates.
5. Select the Description pencil to apply a description, optional.
6. Place the cursor in the Description panel and enter the description, optional (1-64 characters).
7. Select the Check to apply updates.

4.1 Ingress Ports

1. Add ingress ports by placing the cursor on the desired port. Select with the left mouse button. Drag the port to the Ingress panel and release. Repeat for all desired ports.

Ports may be added in any combination. If multiple ports are added, then the traffic from all ingress ports will be aggregated.

2. Remove a port by selecting the red X.

4.2 Ingress Filters

1. Add ingress filters by placing the cursor on the desired filter template. A previously created filter template or the New filter template may be selected. Select with the left mouse button. Drag the filter template to the Filter panel and release it. Repeat for all desired filter templates.

Filter templates may be added in any combination. If multiple filter templates are added, then the top filter template is the highest priority. Filter templates may be selected and moved up or down depending on preference.

2. Filter templates may be modified by selecting the green filter icon for the desired template.

The Edit Filter panel will be displayed.

It is advisable to rename a previously created filter template if modifications are made when applied to a config map. Changes made to a previously created filter template will not change the original filter template.

3. Select Accept once all desired options have been modified.

4. Remove a Filter Template by selecting the red X.

4.3 Egress Ports

1. Add egress ports by placing the cursor on the desired port. Select with the left mouse button. Drag the port to the Egress panel and release. Repeat for all desired ports. If multiple ports are added, then the traffic will be copied to all egress ports.

2. Add a load balance group by placing the cursor on the desired group. Select with the left mouse button. Drag the group to the Egress panel and release. If New is selected, ports may be applied by placing the cursor on the desired port. Select with the left mouse button. Drag the port to the New panel and release. Repeat for all desired ports.

One load balance group may be applied to the egress. Additional separate ports may also be applied. The traffic applied to the ports assigned to the load balance group will follow the hashing per the load balance policy. If separate ports are added, then the traffic will be copied to the separate ports.

3. Remove a port or load balance group by selecting the red X.

4.4 Egress Filters

Egress filters may be applied to the ports assigned to the egress when creating a config map. Egress filters may not be applied to a load balance group. An egress filter may be created as a Pass By or Deny By.

1. Select the grey filter icon on the port.

The Port XX Egress Filters panel will be displayed.

2. Add egress filters by placing the cursor on the desired filter template. A previously created filter template or the New filter template may be selected. Select with the left mouse button. Drag the filter template below the Port XX Egress Filters and release. Repeat for all desired filter templates.

Filter templates may be added in any combination. If multiple filter templates are added, then the top filter template is the highest priority. Filter templates may be selected and moved up or down depending on preference.


3. Filter templates may be modified by selecting the green filter icon for the desired template.

The Edit Filter panel will be displayed.

It is advisable to rename a previously created filter template if modifications are made when applied to a config map. Changes made to a previously created filter template will not change the original filter template.

4. Select Accept once all desired options have been modified.
5. Remove a filter template by selecting the red X.
6. Select Back when all egress filters have been applied.

The egress port filter icon changes to green.

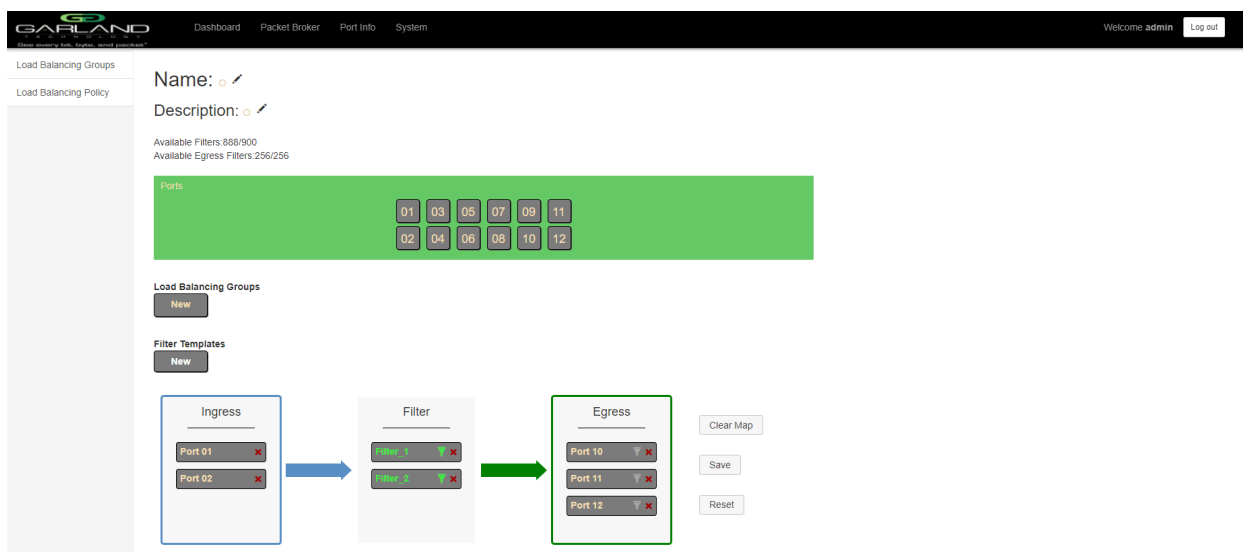

4.5 Config Map Save

1. Select Save to save the current configuration.

The “Save this configuration? (May take a few seconds.)” panel will be displayed.

2. Select Yes to save the Config Map.
3. Select Cancel to disregard.

Packet Broker Configurations

System Filters Resource

	Max	Used	Available
Filters	900	12	888
Egress Filters	256	0	256

Buttons: Save, Refresh, Clear Counters, Create Config Map, Filter Templates, Delete Selected

Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all)
✓	1	map	03	10631079904	06	1	^ v Set	✎	☐
✓	2	map(2)	05	10757751579	03	1	^ v Set	✎	☐
✓	3	map(3)	07	10631079904	09	1	^ v Set	✎	☐
✓	4	map(4)	09	10757751579	07	1	^ v Set	✎	☐
✓	5	map(5)	11	10631079904	01	1	^ v Set	✎	☐
✓	6	map(6)	01	10757751579	11	1	^ v Set	✎	☐
✓	7	map(7)	04	10977707008	06	1	^ v Set	✎	☐
✓	8	map(8)	06	11090293613	04	1	^ v Set	✎	☐
✓	9	map(9)	08	10977707008	10	1	^ v Set	✎	☐
✓	10	map(10)	10	11090293613	08	1	^ v Set	✎	☐
✓	11	map(11)	12	10977707008	02	1	^ v Set	✎	☐
✓	12	map(12)	02	11090293613	12	1	^ v Set	✎	☐

4.6 Modify a Config Map

1. Modify a config map by selecting the Edit icon. Config map modifications include the following. Modifications may be made using the create sections previously discussed.

Name
Description
Add/Remove Ingress Ports
Add/Remove/Modify/Reprioritize Ingress Filters
Add/Remove Egress Ports
Add/Remove/Modify/Reprioritize Egress Filters

4.6.1 Save

1. Select Save to save the current configuration.

The “Save this configuration? (May take a few seconds.)” panel will be displayed.

2. Select Yes to save the config map.
3. Select Cancel to disregard.

4.6.2 Reset

1. Select reset to reset the current configuration.

The “Reset all changes?” panel will be displayed.

2. Select Yes to reset the Config Map.
3. Select Cancel to disregard.

Packet Broker Configurations

System Filters Resource

	Max	Used	Available
Filters	900	12	888
Egress Filters	256	0	256

Buttons: Save, Refresh, Clear Counters, Create Config Map, Filter Templates, Delete Selected

Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all)
✓	1	map	03	10631079904	06	11	^ v Set	✎	☐
✓	2	map(2)	05	10757751579	03	11	^ v Set	✎	☐
✓	3	map(3)	07	10631079904	09	11	^ v Set	✎	☐
✓	4	map(4)	09	10757751579	07	11	^ v Set	✎	☐
✓	5	map(5)	11	10631079904	01	11	^ v Set	✎	☐
✓	6	map(6)	01	10757751579	11	11	^ v Set	✎	☐
✓	7	map(7)	04	10977707008	06	11	^ v Set	✎	☐
✓	8	map(8)	06	11090293613	04	11	^ v Set	✎	☐
✓	9	map(9)	08	10977707008	10	11	^ v Set	✎	☐
✓	10	map(10)	10	11090293613	08	11	^ v Set	✎	☐
✓	11	map(11)	12	10977707008	02	11	^ v Set	✎	☐
✓	12	map(12)	02	11090293613	12	11	^ v Set	✎	☐

4.7 Config Map Statistics

Config map statistics are displayed in the filter match column for each config map. The number displayed represents all packets that have passed through the config map.

1. Select Refresh to refresh the config map statistics.
2. Select Clear Counters to clear and refresh the config map statistics.
3. Select the View Counts icon to display individual statistics.

Map Stats: map Close

Buttons: Clear Counts, Refresh Counts

Tabs: Ingress, Filters, Egress

Ingress: Port 03 10631079904, Port 05 10631079904, Port 06 10631079904

4. Select Refresh Counts to refresh the statistics.
5. Select Clear Counts to clear and refresh the statistics.
6. Select the Egress Filter icon to display the statistics.



7. Select Refresh Counts to refresh the statistics.
8. Select Clear Counts to clear and refresh the statistics.
9. Select Back to return to the individual statistics.

Packet Broker Configurations

System Filters Resource

	Max	Used	Available
Filters	900	12	888
Egress Filters	256	0	256

Save Refresh Clear Counters Create Config Map Filter Templates Delete Selected

Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all)
✓	1	map	03	10631079904	06	10	^ v Set	✕	☐
✓	2	map(2)	05	10757751579	03	10	^ v Set	✕	☐
✓	3	map(3)	07	10631079904	08	10	^ v Set	✕	☐
✓	4	map(4)	09	10757751579	07	10	^ v Set	✕	☐
✓	5	map(5)	11	10631079904	01	10	^ v Set	✕	☐
✓	6	map(6)	01	10757751579	11	10	^ v Set	✕	☐
✓	7	map(7)	04	10977707008	06	10	^ v Set	✕	☐
✓	8	map(8)	06	11090293613	04	10	^ v Set	✕	☐
✓	9	map(9)	08	10977707008	10	10	^ v Set	✕	☐
✓	10	map(10)	10	11090293613	08	10	^ v Set	✕	☐
✓	11	map(11)	12	10977707008	02	10	^ v Set	✕	☐
✓	12	map(12)	02	11090293613	12	10	^ v Set	✕	☐

4.8 Delete Config Map

1. Select the Delete in the Delete column for the desired config map.
2. The Select All option may be selected to delete all config maps.
3. Select Delete Selected.

Packet Broker Configurations

System Filters Resource

	Max	Used	Available
Filters	900	2	898
Egress Filters	256	0	256

Save Refresh Clear Counters Create Config Map Filter Templates Delete Selected

Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all)
☒	1	Traffic_A	03	0	06	11	^ v Set		☐
☒	2	Traffic_B	03	0	07	11	^ v Set		☐

4.9 Config Map Priority

The config map priority needs to be considered when the same ingress port is used in multiple config maps to multiple egress destinations or the same egress destination. In this case, the config map with the highest priority will be considered first. In the above example, there are two config maps with ingress port 3. The Traffic_A config map is the highest priority, 1. The Traffic_B is the next priority, 2. Consequently, a config map with priority 21 has a higher priority than a config map with priority 34.

The Priority of a config map may be changed to a higher or lower value using two methods.

Method 1

1. Select the up or down arrow for the config map.
2. Select Save to save updates.

Method 2

1. Select Set.

The Set Priority panel will be displayed.

2. Enter the priority in the Set New Priority panel.
3. Select Set to accept the priority value.
4. Select Cancel to disregard.
5. Select Save to save updates.

Packet Broker Configurations

System Filters Resource

	Max	Used	Available
Filters	900	2	898
Egress Filters	256	0	256

Save Refresh Clear Counters Create Config Map Filter Templates Delete Selected

Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all)
✓	1	map	03	0	04	1	^ v Set	✎	☐
-	2	map(2)	04	0	12	1	^ v Set	✎	☐

4.10 Enable/Disable Config Map

Config maps may be enabled or disabled as desired. If a config map is enabled, it is in the database and available for traffic. If a config map is disabled, it is in the database and not available for traffic. If the config map has a green check, then it is enabled. If the config map has a red dash, then it is disabled.

4.10.1 Disable Config Map

1. Select the green check for the config map in the Enable column.

The green check will change to a red dash.

2. Select Save.

4.10.2 Enable Config Map

1. Select the red dash for the config map in the Enable column.

The red dash will change to a green check.

2. Select Save.

For questions, please contact Garland Technology Support at:
8AM-9PM (CST) Monday - Friday (Except for observed US Holidays)
Tel: 716.242.8500 Online: garlandtechnology.com/support