


## AF10G72AC

The following procedure may be used to configure SNMP v2c.

1. Select System Management.

2. Select SNMP Management.

The SNMP Server Configuration Tab panel will be displayed.

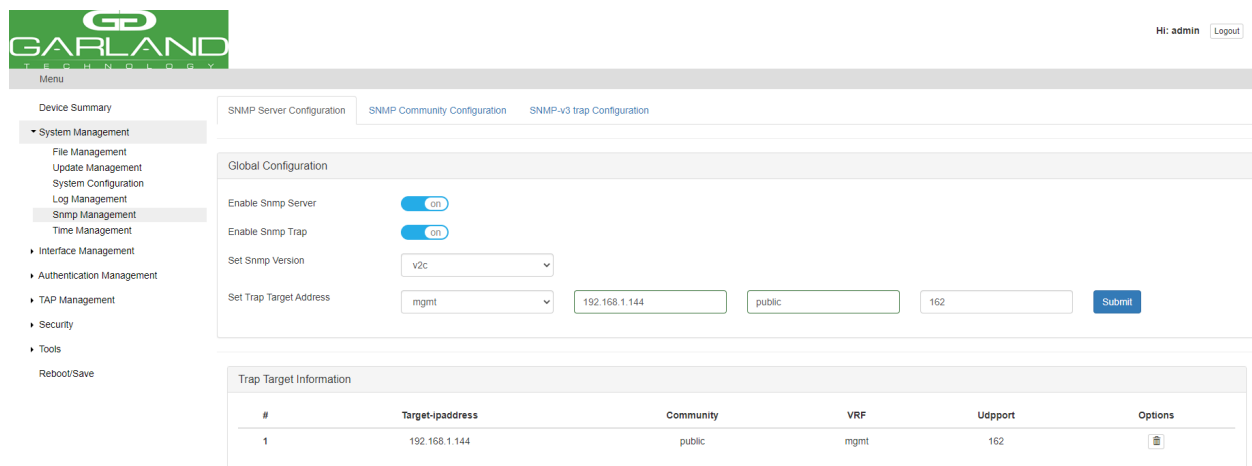

Hi: admin Logout

Menu

- Device Summary
- System Management
  - File Management
  - Update Management
  - System Configuration
  - Log Management
  - Snmp Management
  - Time Management
- Interface Management
- Authentication Management
- TAP Management
- Security
- Tools
- Reboot/Save

SNMP Server Configuration | SNMP Community Configuration | SNMP-v3 trap Configuration


Global Configuration

Enable Snmp Server  on

Enable Snmp Trap  on

Set Snmp Version v2c

Set Trap Target Address mgmt 192.168.1.144 public 162

#	Target-ipaddress	Community	VRF	Udpport	Options
1	192.168.1.144	public	mgmt	162	

3. Enable the SNMP Server.

4. Enable the SNMP Trap.

5. Select the SNMP Version, v2c.

6. Select or enter the Set Trap Target Address options.


- mgmt
- A.B.C.D Address of Target Server
- SNMP Community String
- UDP Port Number

7. Select Submit. The Trap Target Information will be displayed. Additional Trap Targets may be added.

8. The Trap Target may be deleted by selecting the Trash Can under the Options column.

9. Select the SNMP Community Configuration Tab.

The SNMP Community Configuration Tab panel will be displayed.

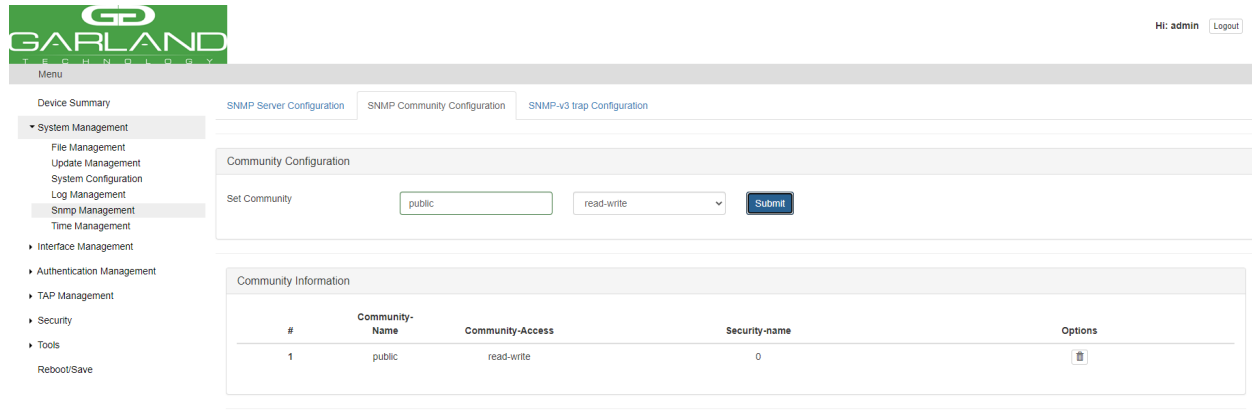

10. Select or enter the Set Community options.

- Enter the Community Name.
- Select the Community Action, (read-only, read-write)

11. Select submit. The Community Information will be displayed.

12. The Community Information may be deleted by selecting the Trash Can under the Options column.