

## PacketMAX AF10G72AC

Configuring TACACS+ on the PacketMAX Advanced Features involves the following considerations:

1. Configuring TACACS+ on the Advanced Features unit.
2. Configuring the Login access on the Advanced Features to the TACACS+ Server.
3. Creating users in the tac\_plus.conf file on the TACACS+ Server to determine Authentication and Authorization.
4. Accounting via the accounting file /var/log/tac\_plus.acct file on the TACACS+ Server. (optional)
5. Creating a Key on the Advanced Features that is defined in the tac\_plus.conf file on the TACACS+ Server. (optional)
6. Delete TACACS+ on the Advanced Features unit.

This procedure will address items 1, 2, 3 and 6. Creating a Shared Secret and Accounting are optional.

### 1. Configuring TACACS+ on the AF.

TACACS+ may be set up via the GUI or via CLI commands. This procedure focuses on the CLI command method.

Connect to the Advanced Features unit:

A connection to the unit may be established using two options:

- a) Directly connected to the Console Interface - COM Port using Putty/Serial connection.
- b) Connected via the IP Management Interface using Putty/SSH connection.

1. Login to the Advanced Features unit, (admin/gtadmin1).
2. Enter "enable".

```
Switch> enable
```

3. Enter "configure terminal".

```
Switch# configure terminal  
Switch(config)#
```

4) Enter the following commands to configure TACACS+ on the Advanced Features unit:

```

Switch(config)# aaa new-model
Switch(config)# aaa authentication login tacacs tacplus local
Switch(config)# aaa authorization exec tacacs tacplus local
Switch(config)# tacacs-server host mgmt-if xxx.xxx.xxx.xxx key secretkey
                    auth-port 49
  
```

TACACS+ Server IP Address

Key (optional) defined in the tac\_plus.conf file

## 2. Configuring the Login access on the Advanced Features to the TACACS+ Server.

1) Enter the following commands to configure the login access on the Advanced Features to the TACACS+ server.

```

Switch(config)# line vty 0 7
Switch(config-line)# exec-timeout 0 0
Switch(config-line)# privilege level 4
Switch(config-line)# no line-password
Switch(config-line)# login authentication tacacs
Switch(config-line)# authorization exec tacacs
Switch(config-line)# exit
Switch(config)# exit
Switch#
  
```

## 3. Creating users in the tac\_plus.conf file on the TACACS+ Server to determine Authentication.

The following are user examples in the tac\_plus.conf file on the TACACS+ Server.

```

Authentication Username = afuser1
                Password = password1
Authorization   Administrator privilege level 4
  
```

```

user = afuser1 {
  global = cleartext "password1"
  service = exec {
  }
}
  
```

```

Authentication Username = afuser2
                Password = password2
Authorization   Administrator privilege level 4
  
```

```
user = afuser2 {  
  global = cleartext "password2"  
  service = exec {  
  }  
}
```

## 6. Delete TACACS+ on the AF.

Should the TACACS+ Server become unavailable for login and access to the unit via local login is desired, enter the following commands. This will delete all of the TACACS+ configuration on the Advanced features unit and allow access:

- GUI Local Login (admin/gtadmin1)
- Access via the Console/Serial Interface

Connect to the Advanced Features unit:

A connection to the unit may be established using two options:

- Directly connected to the Console Interface - COM Port using Putty/Serial connection.
- Connected via the IP Management Interface using Putty/SSH connection.

1. Login to the Advanced Features unit, (admin/gtadmin1).

2. Enter "enable".

```
Switch> enable
```

3. Enter "configure terminal".

```
Switch# configure terminal  
Switch(config)#
```

4. Enter the following command to delete TACACS+ on the unit.

```
Switch(config)# no aaa new-model  
Switch(config)# exit  
Switch#
```