



AF1G40AC

The following procedure may be used to configure SNMP v2c.

1. Select System Management.
2. Select SNMP Management.


The SNMP Server Configuration Tab panel will be displayed.

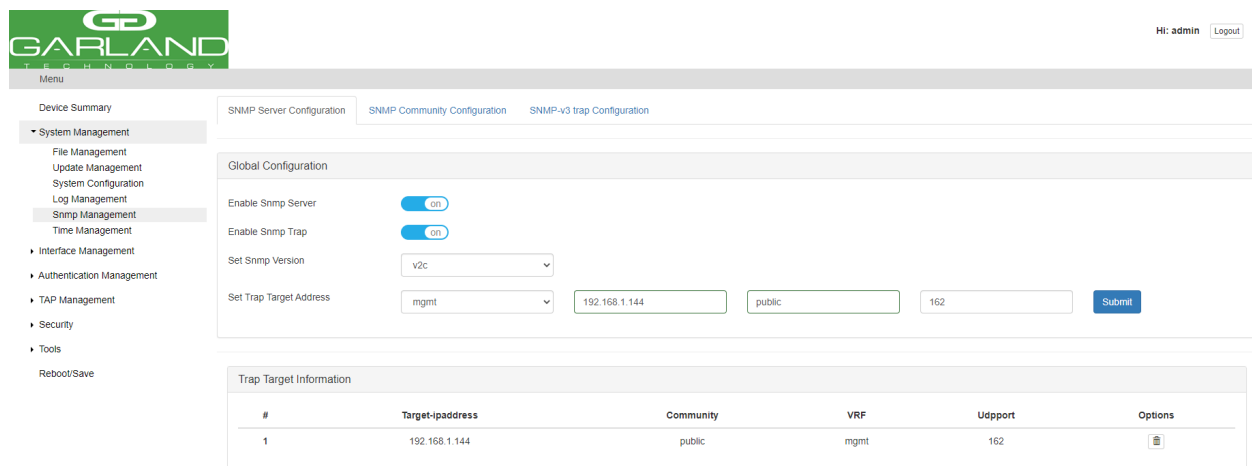

| # | Target-ipaddress | Community | VRF | Udpport | Options |
|---|------------------|-----------|------|---------|---|
| 1 | 192.168.1.144 | public | mgmt | 162 |  |

3. Enable the SNMP Server.
4. Enable the SNMP Trap.
5. Select the SNMP Version, v2c.
6. Select or enter the Set Trap Target Address options.
 - mgmt
 - A.B.C.D Address of Target Server
 - SNMP Community String
 - UDP Port Number
7. Select Submit. The Trap Target Information will be displayed. Additional Trap Targets may be added.
8. The Trap Target may be deleted by selecting the Trash Can under the Options column.
9. Select the SNMP Community Configuration Tab.

The SNMP Community Configuration Tab panel will be displayed.

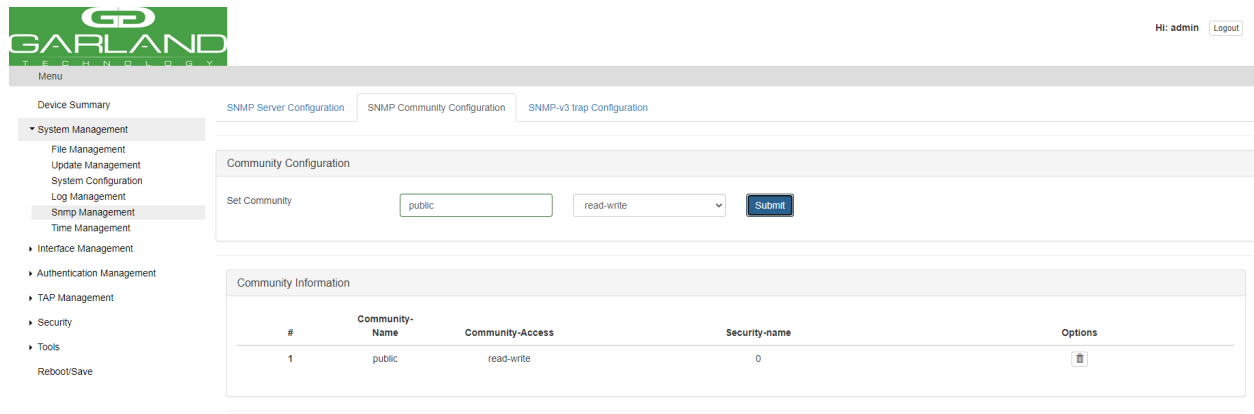

10. Select or enter the Set Community options.

- Enter the Community Name.
- Select the Community Action, (read-only, read-write)

11. Select submit. The Community Information will be displayed.

12. The Community Information may be deleted by selecting the Trash Can under the Options column.