

AF1G52AC

The following procedure may be used to configure SNMP v2c.

1. Select System Management.
2. Select SNMP Management.

The SNMP Server Configuration Tab panel will be displayed.

#	Target-ipaddress	Community	VRF	Udpport	Options
1	192.168.1.144	public	mgmt	162	

3. Enable the SNMP Server.
4. Enable the SNMP Trap.
5. Select the SNMP Version, v2c.
6. Select or enter the Set Trap Target Address options.
 - mgmt
 - A.B.C.D Address of Target Server
 - SNMP Community String
 - UDP Port Number
7. Select Submit. The Trap Target Information will be displayed. Additional Trap Targets may be added.
8. The Trap Target may be deleted by selecting the Trash Can under the Options column.
9. Select the SNMP Community Configuration Tab.

The SNMP Community Configuration Tab panel will be displayed.

The screenshot shows the SNMP Community Configuration Tab panel. The left sidebar contains a menu with categories like System Management, Interface Management, Authentication Management, TAP Management, Security, and Tools. The main content area has tabs for SNMP Server Configuration, SNMP Community Configuration (selected), and SNMP-v3 trap Configuration. Under the selected tab, there is a 'Community Configuration' section with a 'Set Community' form. The form has a text input for 'Community Name' (containing 'public'), a dropdown for 'Community-Access' (set to 'read-write'), and a 'Submit' button. Below this is a 'Community Information' table.

#	Community-Name	Community-Access	Security-name	Options
1	public	read-write	0	

10. Select or enter the Set Community options.

- Enter the Community Name.
- Select the Community Action, (read-only, read-write)

11. Select submit. The Community Information will be displayed.

12. The Community Information may be deleted by selecting the Trash Can under the Options column.