

## P10GSFPBPFE Quick Start Guide


The units are shipped with a default IP Management Address (10.10.10.200). Use the following procedure to perform the initial turn up and launch the GUI.

The Initial Turn Up includes:

1. Connecting to the Serial Interface
2. Setting the IP Address
3. Setting the Netmask
4. Setting the Gateway
5. Save Changes and Logout
6. Launch the GUI

### 1) Connecting to the Serial Interface

1. Connect a Serial cable from a COM port on the laptop or PC to the Serial Interface on the unit.
2. Launch Putty and configure the Serial connection options as follows.

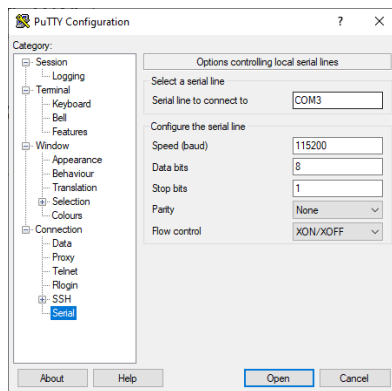

3. Press enter and the unit will respond with the login prompt.
4. Enter the default username (admin)
5. Enter the default password (gtadmin1)

### 2. Setting the IP Address

1. Select 2.
2. Select 3.
3. Press the backspace key to remove the current IP Address.
4. Enter the new IP Address.
5. Press Enter.

### 3. Setting the Netmask

1. Select 4.
2. Press the backspace key to remove the current Netmask.
3. Enter the new Netmask.
4. Press Enter.

### 4. Setting the Gateway

1. Select 5.
2. Press the backspace key to remove the current Gateway.
3. Enter the new Gateway Address.
4. Press Enter.

### 5. Save Changes and Logout

1. Press a.
2. Press 0.
3. Press 0.

### 6. Launch the GUI

1. Launch the web browser on the laptop or PC.
2. Enter the URL for the P10GSFPBPFE. (<https://xxx.xxx.xxx.xxx>)
3. Press Enter.
4. Enter the Username and Password. (admin/gtadmin1)