

### **FAB Firmware Update Procedures Via Boot Loader**

1. Connect a serial cable to the console port with **115200, 8, 1, N** for the settings.
2. Connect the Ethernet cable to the management port.
3. Set up a TFTP server (eg. SolarWinds) and place the image (vmlinux.64.gz) in the proper folder that makes it available for TFTP transfer. **It is imperative that the firmware you have be renamed to vmlinux.64.gz**
4. Set the MTU on the TFTP server to be 1500 bytes.
5. If the unit boots up properly, erase the current configuration by issuing the command **“erase startup-config”** prior to upgrading to the new image!
6. Reset the system and type **“CTRL-C”** at while it is booting in order to get to the boot prompt.
7. At the boot prompt, please enter the following commands:  
**boot# set ipaddr**  
**boot# set serverip**  
**boot# set netmask**
8. Type **“print”** at the prompt and double check the variables you set up.
9. Type **“save”** to save the parameters.
10. At the boot prompt, please execute the following command:  
**boot# run ldgz**  
(this command will download the image (vmlinux.64.gz) from the location specified by the tftp server at )
11. Once the command above has completed, you will need to execute the command: **boot# run ergz** (this command will erase the flash image)
12. Next, execute the following command:  
**boot# run cfgz**  
(this command will copy the firmware to flash) **\*\*\*\*\* PLEASE NOTE - The procedure that this**



**command runs will take a while, Please DO NOT INTERRUPT - do not press the enter key more than once \*\*\*\*\***

13. Finally, run the following command:

**boot# reset** (the CLI software prompt will come up)

+++++ Sample +++++

set ipaddr 192.168.0.111

set serverip 192.168.0.21

set netmask 255.255.255.0

save

run ldgz

run ergz

run cfgz

reset

**For questions, please contact Garland Technical Support at:**

8 AM – 9 PM (CST) Monday – Friday (except for observed US Holidays) +1.716.242.8500

support@garlandtechnology.com