

The units are shipped with a default IP Management Address (10.10.10.200) and Gateway (10.10.10.1). Use the following procedure to configure the IP Management Interface address, gateway and launch the GUI.

Connect to the Advanced Features

1. Connect a Serial cable from a COM port on the laptop or PC to the Serial Interface on the unit.
2. Launch Putty and configure the Console connection as follows:

| | |
|--------------|----------|
| Speed (baud) | 115200 |
| Data bits | 8 |
| Stop bits | 1 |
| Parity | None |
| Flow Control | XON/XOFF |

3. Press the Return key.
4. Enter enable.
5. Enter configure terminal.
6. To modify the IP Management Interface address and gateway, enter the following commands.

```
Switch(config)# management ip address xxx.xxx.xxx.xxx/mask
Switch(config)# management route gateway xxx.xxx.xxx.xxx
Switch(config)# exit
Switch# write
[OK]
```

7. Launch the Web Browser on the laptop or PC.
8. Enter the IP Address and press enter.

The GUI Login panel will appear.

9. Enter the Username and Password, (admin/gtadmin1).
10. Select Login.

The Device Summary panel will appear.