

The units are shipped with a default IP Management Address (10.10.10.200) and Gateway (10.10.10.1). Use the following procedure to configure the IP Management Interface address, gateway and launch the GUI.

## Connect to the Advanced Features

1. Connect a Serial cable from a COM port on the laptop or PC to the Serial Interface on the unit.
2. Launch Putty and configure the Console connection as follows:

Speed (baud)	115200
Data bits	8
Stop bits	1
Parity	None
Flow Control	XON/XOFF

3. Press the Return key.
4. Enter enable.
5. Enter configure terminal.
6. To modify the IP Management Interface address and gateway, enter the following commands.

```
Switch(config)# management ip address xxx.xxx.xxx.xxx/mask  
Switch(config)# management route gateway xxx.xxx.xxx.xxx  
Switch(config)# exit  
Switch# write  
[OK]
```

7. Launch the Web Browser on the laptop or PC.
8. Enter the IP Address and press enter.  
*The GUI Login panel will appear.*
9. Enter the Username and Password, (admin/gtadmin1).
10. Select Login.

*The Device Summary panel will appear.*