

See every bit, byte, and packet®

# User Guide

# INT10G8SR56-SP / INT10G8LR56-SP



12/2023

Release Version: 4.29.2



Copyright © 2023 Garland Technology, LLC. All rights reserved.

No part of this document may be reproduced in any form or by any means without prior written permission of Garland Technology, LLC.

The Garland Technology trademarks, service marks ("Marks") and other Garland Technology trademarks are the property of Garland Technology, LLC. PacketMAX Series products of marks are trademarks or registered trademarks of Garland Technology, LLC. You are not permitted to use these Marks without the prior written consent of Garland Technology.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Garland Technology and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied.



# Table of Contents

1. Dashboard	5
Basic LED Indications	5
Dashboard Panel	5
LED Indications	5
Packet Broker	6
Dashboard Panel	6
LED Indications	6
2. System	7
System Info	7
General	8
Admin	8
Users	8
Groups	9
Authentication	9
Network Settings	11
IPv4 / Disable	12
IPv4 Enable	12
IPv6 Enable	12
IPv6 Disable	12
Add SSL Certificate	13
Disable Using Uploaded SSL Certificate	13
Date & Time	13
Timezone	14
UTC	14
Manually Set Date & Time	14
NTP No Authentication (Symmetric)	14
NTP Authentication (Symmetric)	15
Svslog	15
Systog Test	16
SNMP	16
SNMP Test	16
Export Configuration	17
Import Configuration	17
Software Upgrade	17
Reboot	17
3 Packet Broker	19
Tunnels	19
Encapsulate VXI AN Packets (VXI AN-TX Only)	20
Decansulate VXI AN Packets (VXI AN-RX Only)	20
Encapsulate I2GRE Packets (GRE-TX Only)	22



EdgeLens | INT10G8XX56-SP | 4.29.2

Decapsulate I2GRE Packets (GRE-RX Only)	26
Filter Template	28
Load Balancing Group	29
Load Balancing Policy	30
Config Map	30
Ingress	31
Filter	32
Egress	33
Egress Filter	34
Config Map Save	35
Modify a Config Map	35
Config Map Statistics	36
Delete Config Map	37
Config Map Priority	37
Enable/Disable Config Map	38
Disable Config Map	38
Enable Config Map	38
4. Port Info	39
Port Configuration	40
Port Description	40
Set Speed	40
Mode	40
Port Statistics	40
VLAN Tag	40
VLAN Strip	41



# 1. Dashboard

This section provides an overview of the basic dashboard architecture, default port assignments and LED indications. The dashboard provides an exact detail of the unit's faceplate. However, some LED indications that are displayed on the faceplate, are not displayed on the dashboard.

The dashboard provides access to the Packet Broker, Port Info and System configuration sections by selecting the desired option in the top menu bar. These options are covered in detail per their specific sections.



### **Basic LED Indications**

The basic LED indications are consistent regardless of configuration changes. The Ethernet and Serial interfaces always indicate (GREEN). However, on the faceplate, the Ethernet Interface has LEDs to indicate link and activity while there are no Serial Interface LEDs.

### **Dashboard Panel**



### **LED Indications**

PS2 PS1 SYS Ethernet Interface Serial Interface Power Supply 2 LED Power Supply 1 LED System LED Upper Left LED (always illuminated) Lower Left LED (always illuminated)



### **Packet Broker**

The packet broker consists of ports 1 through 44. Ports 1 through 40 may be configured as 1G or 10G. Ports 1 through 8 utilize internal optics. They have internal fibers that connect to the bulkhead connectors on the front faceplate. Ports 41 through 44 are 40G ports, that may be split into 4 x10G ports.

### **Dashboard Panel**

1	9				
PS2	<u> </u>	<u> </u>	<u> </u>	<b>. VA 14 VA 14 VA 74 VA 74 VA 14 VA</b>	
SYS	UA1 BP LIA3 BP LIA5 BP LIA7 BP				

### **LED Indications**

Port 1 LA1	Link/Activity LED		
Port 2 LA2	Link/Activity LED		
BP LED	N/A		
Port 3 LA3	Link/Activity LED		
Port 4 LA4	Link/Activity LED		
BP LED	N/A		
Port 5 LA5	Link/Activity LED		
Port 6 LA6	Link/Activity LED		
BP LED	N/A		
Port 7 LA7	Link/Activity LED		
Port 8 LA8	Link/Activity LED		
BP LED	N/A		
Port 9 Left/Right Up Arrow	Link/Activity LED	Port 10 Left/Right Down Arrow	Link/Activity LED
Port 11 Left/Right Up Arrow	Link/Activity LED	Port 12 Left/Right Down Arrow	Link/Activity LED
Port 13 Left/Right Up Arrow	Link/Activity LED	Port 14 Left/Right Down Arrow	Link/Activity LED
Port 15 Left/Right Up Arrow	Link/Activity LED	Port 16 Left/Right Down Arrow	Link/Activity LED
Port 17 Left/Right Up Arrow	Link/Activity LED	Port 18 Left/Right Down Arrow	Link/Activity LED
Port 19 Left/Right Up Arrow	Link/Activity LED	Port 20 Left/Right Down Arrow	Link/Activity LED
Port 21 Left/Right Up Arrow	Link/Activity LED	Port 22 Left/Right Down Arrow	Link/Activity LED
Port 23 Left/Right Up Arrow	Link/Activity LED	Port 24 Left/Right Down Arrow	Link/Activity LED
Port 25 Left/Right Up Arrow	Link/Activity LED	Port 26 Left/Right Down Arrow	Link/Activity LED
Port 27 Left/Right Up Arrow	Link/Activity LED	Port 28 Left/Right Down Arrow	Link/Activity LED
Port 29 Left/Right Up Arrow	Link/Activity LED	Port 30 Left/Right Down Arrow	Link/Activity LED
Port 31 Left/Right Up Arrow	Link/Activity LED	Port 32 Left/Right Down Arrow	Link/Activity LED
Port 33 Left/Right Up Arrow	Link/Activity LED	Port 34 Left/Right Down Arrow	Link/Activity LED
Port 35 Left/Right Up Arrow	Link/Activity LED	Port 36 Left/Right Down Arrow	Link/Activity LED
Port 37 Left/Right Up Arrow	Link/Activity LED	Port 38 Left/Right Down Arrow	Link/Activity LED
Port 39 Left/Right Up Arrow	Link/Activity LED	Port 40 Left/Right Down Arrow	Link/Activity LED
Port 41 Right Up Arrow	Link/Activity LED		
Port 41.1 – 41.4 (split)	Link LEDs		
Port 42 Left Down Arrow	Link/Activity LED		
Port 42.1 – 42.4 (split)	Link LEDs		
Port 43 Right Up Arrow	Link/Activity LED		
Port 43.1 – 43.4 (split)	Link LEDs		
Port 44 Left Down Arrow	Link/Activity LED		
Port 44.1 – 44.4 (split)	Link LEDs		

\* The right up/down arrows for ports 9 through 40 are activity LEDs. These LEDs are N/A in the GUI.

\* The up/down arrow LEDs for ports 41 through 44 only indicate link in the GUI.



# 2. System

The following configuration options may be displayed, modified, enabled, or disabled under the System panel.

System Info General Admin Network Settings Date & Time Syslog SNMP Export Configuration Import Configuration Software Upgrade Reboot



1. Select System on the Dashboard Menu bar.

	Dashboard	Packet Broker	Port Info	System			INLINE BYPASS O O O ® O O O	#таріт 🤤
0	vetom l	oformation	,					
Chargie N		Svetem Test	1					
Chassis Mod	iel	INT10G8SR56-SP						
MAC A Softwa	ddress re Version	f0:93:c5:f2:b7:e3 4.29.2						

The System panel will be displayed. The configuration options will be displayed on the left side of the panel.

# System Info

The System Information panel displays the following.

Chassis Name Chassis Model MAC Address Software Version Chassis Serial Number



1. Select System Info.

The System Information panel will be displayed.

# General

The following configuration options may be displayed or modified.

Chassis Name Key Press Timeout (secs)

1. Select General.

The General System Settings panel will be displayed.

- 2. Select Edit Configuration.
- 3. Enter the desired Chassis Name.
- 4. Enter the desired Key Press Timeout.
- 5. Select Save to save updates.
- 6. Select Cancel to return to the General System Settings panel.

# Admin

The following configuration options may be displayed, modified, enabled, or disabled.

Users Groups Authentication Local TACACS Primary TACACS Secondary

1. Select Admin.

The Admin Settings panel will be displayed.

### Users

The default user is "admin". Changes to the default user "admin" are allowed and may be deleted. Users displayed on the Admin Settings panel are for local authentication only, not used for TACACS.

1. Select Users + to create a new user.

The Create New User panel will be displayed.

2. Enter the Username.

A username may be from 5 to 25 characters, a-z, A-Z, 0-9. A username may not contain spaces or special characters.

3. Enter the Password.



A password may be from 5 to 25 characters, a-z, A-Z, 0-9 and special characters  $\sim !@#\%^{[]}?, =+-*$ . A password may not contain spaces.

- 4. Select the group for the user.
- 5. Select Save to save updates.

The new user will be displayed on the Admin Settings panel.

- 6. Select Cancel to return to the Admin Settings panel.
- 7. Edit the username, password or assigned group by selecting the pencil.
- 8. Delete the user by selecting the red X.

### Groups

The group defines the authorization for a user or group of users. A group may be used for local or TACACS authorization. In Use "true" means that there is at least one local user assigned to the group. If a group is used by TACACS, the In Use will indicate "false". There are three defaults groups: admin, OPER and NOC. All three groups may be modified, however only the OPER and NOC groups may be deleted.

1. Select Groups + to create a new group.

The Create New Group panel will be displayed.

- 2. Enter the Group Name.
- 3. Select the desired privileges.
- 4. Select Save to save updates.

The new group will be displayed on the Admin Settings panel.

- 5. Select Cancel to return to the Admin Settings panel.
- 6. Modify the group privileges by selecting the pencil.
- 7. Deleted the group by selecting the red X.

If a group has at least one user assigned it cannot be deleted.

### Authentication

Two authentication options are supported, local or TACACS. TACACS authentication supports two options, primary and secondary. The TACACS primary and secondary options may be enabled or disabled independently. Local or TACACS authentication may be enabled or disabled independently, however, at least one option must be enabled. The TACACS primary or secondary function supports IPv4 only, IPv6 is not supported.

1. Select Authentication Settings.

The Authentication Settings panel will be displayed. Local authentication is enabled by default.

### Local Authentication Disable

1. Deselect Local Authentication.



Local authentication may only be disabled provided that TACACS authentication, primary or secondary has previously been enabled.

2. Select Save.

#### Local Authentication Enable

- 1. Select Local Authentication.
- 2. Select Save.

#### **TACACS Primary Authentication**

1. Select Enable Primary.

The TACACS Primary panel will be displayed.

- 2. Enter the IP Address, IPv4 or IPv6.
- 3. Enter the Secret Word, (optional).
- 4. Enter the Timeout value, (5-60 sec).
- 5. Select Save to save updates.
- 6. Select Cancel to return the Admin Settings panel.

#### **TACACS** Test

This option may be used to verify the authentication of a TACACS user, password and authorization group. The TACACS Test option will be active only if TACACS authentication has previously been enabled.

1. Select TACACS Test.

The TACACS Test panel will appear.

- 2. Select Primary.
- 3. Enter the Username.
- 4. Enter the Password.
- 5. Select Test.

The GUI will display the results of the test, "Authentication Test Successful". As well as messages for "authentication:Success", authorization:Success" and "authorization:group:abcdef.

### **TACACS** Ping Test

This option may be used to verify the network connectivity from the unit to the TACACS server. The TACACS Ping option will be active only if TACACS authentication has been previously enabled.

1. Select TACACS 1 Ping.

The GUI will display the results of the ping, "TACACS 1 Ping Successful".



### **TACACS Secondary Authentication**

1. Select Enable Secondary.

The TACACS Secondary panel will be displayed.

- 2. Enter the IP Address, IPv4 or IPv6.
- 3. Enter the Secret Word, (optional).
- 4. Enter the Timeout value, (5-60 sec).
- 5. Select Save to save updates.
- 6. Select Cancel to return the Admin Settings panel.

### **TACACS** Test

This option may be used to verify the authentication of a TACACS user, password and authorization group. The TACACS Test option will be active only if TACACS authentication has previously been enabled.

1. Select TACACS Test.

The TACACS Test panel will appear.

- 2. Select Secondary.
- 3. Enter the Username.
- 4. Enter the Password.
- 5. Select Test.

The GUI will display the results of the test, "Authentication Test Successful". As well as messages for "authentication:Success", authorization:Success" and "authorization:group:abcdef.

### **TACACS** Ping Test

This option may be used to verify the network connectivity from the unit to the TACACS server. The TACACS Ping option will be active only if TACACS authentication has been previously enabled.

1. Select TACACS 2 Ping.

The GUI will display the results of the ping, "TACACS 2 Ping Successful".

### **Network Settings**

Upon the initial turn up via the serial interface the IPv4 address, IPv4 gateway, IPv6 address and IPv6 gateway may have been already established. The IPv4 and IPv6 management interfaces may be enabled or disabled independently as well as both enabled or disabled simultaneously. If the IPv4 and IPv6 management interfaces are disabled simultaneously, access is only allowed via the serial interface. Any modifications made to any setting option will cause GUI disruption for about 60 seconds. Also note that modifying the management interfaces may cause network disruption if prior consideration and planning have not been performed.



The default system network configurations are as follows:

IPv4 enabled IPv4 address 10.10.10.200 IPv4 gateway 10.10.10.1 IPv6 is disabled.

Via the GUI, the following options may be displayed, modified, enabled, or disabled.

IPv4 Enable/Disable IPv4 Address IPv4 Gateway IPv6 Enable/Disable IPv6 Address IPv6 Gateway SSL Certificate Loaded Using Uploaded SSL Certificate

1. Select Network Settings.

The Network Settings panel will be displayed with the current configuration

### IPv4 / Disable

- 1. Deselect Enable IPv4.
- 2. Select Save.

If the IPv6 management interface has not been enabled the GUI will display a message "Disabling IPv4 and IPv6, GUI will disconnect. Are you sure?

3. Select OK.

### **IPv4 Enable**

- 1. Select Enable IPv4.
- 2. Enter the desired Address, (www.xxx.yyy.zzz/xx).
- 3. Enter the desired Gateway.
- 4. Select Save.

### **IPv6 Enable**

- 1. Select Enable IPv6.
- 2. Enter the desired Address.
- 3. Enter the desired Gateway.
- 4. Select Save.

### IPv6 Disable

- 1. Deselect Enable IPv6.
- 2. Select Save.

If the IPv4 management interface has not been enabled the GUI will display a message "Disabling IPv4 and IPv6, GUI will disconnect. Are you sure?



3. Select OK.

### Add SSL Certificate

Uploading a custom SSL certificate involves two files. The cert.pem file and key.pem file. The unit will validate these files during the upload. If the files do not match or one of the files are corrupted the unit will abort the upload.

1. Select Add SSL Certificate.

The Select Certificate and Select Key File panel will appear.

- 2. Select Choose File for Select Certificate.
- 3. Select the desired cert.pem file.
- 4. Select Open.
- 5. Select the Choose File for Select Key File.
- 6. Select the desired key.pem file.
- 7. Select Open.
- 8. Select Upload.

The GUI message will be displayed, "Please wait. Browser will refresh after 90 seconds".

- 9. Verify SSL Certificate Loaded "true".
- 10. Verify Using Uploaded SSL Certificate "true".

### **Disable Using Uploaded SSL Certificate**

- 1. Select Edit Settings.
- 2. Deselect Using Uploaded SSL Certificate.
- 3. Select Save.

The GUI message will be displayed, "Saved Settings. Changes will cause network connectivity disruption for about 60 seconds".

- 4. Refresh Browser.
- 5. Verify SSL Certificate Loaded "true".
- 6. Verify Using Uploaded SSL Certificate "false".

### Date & Time

The following configuration options may be displayed, modified, enabled, or disabled.

Timezone UTC NTP No Authentication (Symmetric) NTP Authentication (Symmetric)



#### Time Date

1. Select Date & Time.

The Date & Time Settings panel will be displayed.

### Timezone

- 1. Select Edit Settings.
- 2. Select the desired Timezone using the pull-down panel.
- 3. Select Save.
- 4. Select Cancel to return to the Date & Time Settings panel.

### UTC

- 1. Select Edit Settings.
- 2. Select the desired UTC using the pull-down panel.
- 3. Select Save.
- 4. Select Cancel to return to the Date & Time Settings panel.

### Manually Set Date & Time

- 1. Select Edit Settings.
- 2. Enter the Hours or use the up/down arrows to select.
- 3. Enter the Minutes or use the up/down arrows to select.
- 4. Enter the Date, MM/DD/YYYY or use the calendar to select.
- 5. Select Save.
- 6. Select Cancel to return to the Date & Time Settings panel.

### **NTP No Authentication (Symmetric)**

The system supports an IPv4 or IPv6 address for NTP timing. If IPv4 is desired, then an IPv4 management interface must be assigned. If IPv6 is desired, then an IPv6 management interface must be assigned. The system allows for an IPv4 and IPv6 management interface to be assigned simultaneously.

- 1. Select Edit Settings.
- 2. Select NTP timing.
- 3. Enter the IPv4 or IPv6 Address.
- 4. Verify Authenticate, None.
- 5. Select Save.



The NTP Status will display "syncing". Eventually the NTP Status will display "Synced". This can take several minutes.

6. Select Cancel to return to the Date & Time Settings panel.

# **NTP Authentication (Symmetric)**

The system supports an IPv4 or IPv6 address for NTP timing. If IPv4 is desired, then an IPv4 management interface must be assigned. If IPv6 is desired, then an IPv6 management interface must be assigned. The system allows for an IPv4 and IPv6 management interface to be assigned simultaneously.

- 1. Select Edit Settings.
- 2. Select NTP timing.
- 3. Enter the IPv4 or IPv6 Address.
- 4. Select Authenticate, Symmetric.
- 5. Select Encryption Type, (MD5, SHA1, SHA224, SHA256, SHA384, SHA512)
- 6. Enter the Key Number.
- 7. Enter the Key.
- 8. Select Save.

The NTP Status will display "syncing". Eventually the NTP Status will display "Synced". This can take several minutes.

9. Select Cancel to return to the Date & Time Settings panel.

# Syslog

The system supports an IPv4 or IPv6 address for Syslog. If IPv4 is desired, then an IPv4 management interface must be assigned. If IPv6 is desired, then an IPv6 management interface must be assigned. The system allows for an IPv4 and IPv6 management interface to be assigned simultaneously.

1. Select Syslog.

The Syslog Configuration panel will be displayed.

- 2. Select Edit Settings.
- 3. Select Enable Syslog Config.
- 4. Enable Unit ID, (optional).
- 5. Enter the Unit ID, (optional).
- 6. Enter the IPv4 or IPv6 Address.
- 7. Enter the desired UDP Port Number or use the default, 514.
- 8. Select Save.



9. Select Cancel to return the Syslog Configuration panel.

# Syslog Test

1. Select Syslog Test.

The GUI message will be displayed,"Syslog Test Successful!".

2. Verify the Syslog Test Message on the Syslog server.

### SNMP

The system supports an IPv4 or IPv6 address for SNMP. If IPv4 is desired, then an IPv4 management interface must be assigned. If IPv6 is desired, then an IPv6 management interface must be assigned. The system allows for an IPv4 and IPv6 management interface to be assigned simultaneously.

The following SNMP configuration options are supported:

V2 Read/Write V2 Read Only	
V3 Auth Type	MD5 / SHA
V3 Priv Protocol	DES / AES

1. Select SNMP.

The SNMP Configuration panel will be displayed.

- 2. Select Edit Configuration.
- 3. Select Enable SNMP Config.
- 4. Enter the desired Access Port number or use the default, 161.
- 5. Enter the desired Trap Port number or use the default, 162.
- 6. Enter the IPv4 or IPv6 Address.
- 7. Select the desired Protocol, (V2 Read/Write or V2 read Only).
- 8. Enter the desired V2 Community Password.
- 9. Select the desired Protocol, (V3).
- 10. Enter the desired V3 User.
- 11. Enter the desired V3 Auth Password.
- 12. Enter the desired V3 Priv password.
- 13. Select Save.
- 14. Select Cancel to return the SNMP Configuration panel.

### **SNMP** Test

1. Select SNMP Test.



The GUI message will be displayed, "Test Successful!".

2. Verify the SNMP Test Message on the MIB Browser.

# **Export Configuration**

This option creates a configuration file (exportCfg.json) that may be used to recover a unit. The exportCfg.json file may be renamed if desired. The exportCfg.json file does not contain Usernames, Passwords, Groups or Network Settings.

1. Select Export Configuration.

The Export Configuration panel will be displayed.

2. Select Export.

The exportCfg.json file will be downloaded to the default download destination of the browser.

### **Import Configuration**

This option allows a previously created configuration file (exportCfg.json) to be uploaded to the unit. The Chassis Model is the only option that is considered and must match, otherwise the unit will reject the exportCfg.json file.

1. Select Import Configuration.

The Import Configuration panel will be displayed.

- 2. Select Choose File.
- 3. Select the desired exportCfg.json file.
- 4. Select Open.
- 5. Select Upload.

The unit will automatically verify the selected exportCfg.json file.

6. Select Configure.

The unit will import and load the exportCfg.json. An "import done" message will be displayed when complete. A reboot is not required.

### Software Upgrade

This option allows the unit's firmware to be upgraded. An Upgrade Guide is created as part of the standard documentation for each release. Please refer to the Upgrade Guide for the procedure.

### Reboot

This option allows the unit to be rebooted. The traffic will be affected for up to 1 minute.

1. Select Reboot.

The Reboot Device panel will be displayed.

2. Select Reboot.



The unit will present an "Are you sure?" message.

3. Select OK.

The GUI will display a "rebooting" as well as a "Session timed out. Go to Login screen" message.

4. Select Go.

The Login panel will be displayed.



# 3. Packet Broker

The following configuration options may be displayed, modified, enabled, or disabled under the Packet Broker panel.

Configuration Maps Tunnels Filter Templates Load Balance Groups Load Balance Policy



1. Select Packet Broker on the Dashboard menu bar.



The Packet Broker Configurations panel will be displayed.

### Tunnels

The system supports the ability to:

- Encapsulate VXLAN packets
- Decapsulate VXLAN packets
- Encapsulate I2GRE packets
- Decapsulate I2GRE packets



### Encapsulate VXLAN Packets (VXLAN-TX Only)

When a packet is encapsulated with a VXLAN header the new VXLAN header segments are added to the original packet. The VXLAN header segments consists of Ethernet II, IPv4, UDP and VXLAN as shown below.



1. Select Tunnels.

The Tunnels panel will be displayed.

2. Select Create Tunnel.

The Create Tunnels panel will be displayed.

3. Add an ingress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Ingress panel and release.

Create Tunnel			
Ports 01 03 05 07 09 11 13 15 1 02 04 06 08 10 12 14 16 1	7 19 21 23 25 8 20 22 24 26	5 27 29 31 33 3 6 28 30 32 34 34	5 37 39 41 43 6 38 40 42 44
Ingress Configure 🗲 Port 01 🗙	Egress	Clear Save Back	



4. Add an egress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Egress panel and release.

Create Tunnel			
Ports 01 03 05 07 02 04 06 08	09 11 13 15 17 10 12 14 16 18	19 21 23 28 20 22 24 26	5       27       29       31       33       35       37       39       41       43         6       28       30       32       34       36       38       40       42       44
Ingress Port 01 X	Configure 🗲	Egress Port 02 X	Clear Save Back

5. Select Configure.

The Configure panel will be displayed.

- 6. Select VXLAN TX Only
- 7. Enter the Tunnel IP Address, (VXLAN Header SIP).
- 8. Enter the Remote IP Address, (VXLAN Header DIP).
- 9. Enter the Remote MAC Address, (VXLAN Header DMAC).
- 10. Enter the VNID, (1-16777215).

The default UDP destination port is 4789.

11. Select Advanced to modify the UDP destination port, (1-65535).

The default VXLAN Header SMAC is automatically defined by the system. There are five predefined SMACs.

- 12. Select Advanced to select an alternative SMAC or to manually enter the SMAC, (VXLAN Header SMAC).
- 13. Select Advanced to add a VLAN ID to the VXLAN Header, optional, (1-4095).
- 14. Select Set.
- 15. Select Cancel to disregard.
- 16. Select Save.

The vxlan-tx-only tunnel will be displayed on the Tunnels panel.



Funnel	s											
Create Tunn	nel											
Tunnel ID	Primary VNID	Secondary VNIDs	Туре	IP Address	MAC Address	Remote IP	Remote MAC	UDP Port	Egress Port	Ingress Port	Tunnel VLAN ID	
1	1234		vxlan-tx-only	10.10.10.10	f2:93:c5:e5:30:44	10.10.10.25	f0:93:c5:a1:b2:c3	4789	2	1		x

### 17. The tunnel may be deleted by selecting red X.

### Decapsulate VXLAN Packets (VXLAN-RX Only)

When the VXLAN header is decapsulated from a packet, the VXLAN header segments are removed as shown below.



1. Select Tunnels.

The Tunnels panel will be displayed.

2. Select Create Tunnel.

The Create Tunnels panel will be displayed.

3. Add an ingress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Ingress panel and release.

Create Tunnel	l			
Ports 01 03 05 07 02 04 06 08	09 11 13 15 17 10 12 14 16 18	19 21 23 25 20 22 24 26	5 27 29 31 33 5 28 30 32 34	35     37     39     41     43       36     38     40     42     44
Ingress Port 01 X	Configure 🗲	Egress	Clear Save Back	



4. Add an egress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Egress panel and release.

# **Create Tunnel**

01       03       05       07       09       11       13       15       17         02       04       06       08       10       12       14       16       18	7 19 21 23 25 3 20 22 24 26	52729313335373941436283032343638404244
Ingress Port 01	Egress Port 02 X	Clear Save Back

5. Select Configure.

The Configure panel will be displayed.

- 6. Select VXLAN RX Only
- 7. Enter the Tunnel IP Address, (VXLAN Header DIP).
- 8. Enter the Remote IP Address, (VXLAN Header SIP).
- 9. Enter the VNID, (1-16777215).

The default UDP destination port is 4789.

10. Select Advanced to modify the UDP destination port, (1-65535).

The default VXLAN Header SMAC is automatically defined by the system. There are five predefined SMACs.

- 11. Select Advanced to select an alternative DMAC or to manually enter the DMAC, (VXLAN Header DMAC).
- 12. Select Advanced to add a VLAN ID, optional, (1-4095).
- 13. Select Set.
- 14. Select Cancel to disregard.
- 15. Select Save.



The vxlan-rx-only tunnel will be displayed on the Tunnels panel.

#### Tunnels

Create Tun	nel											
Tunnel ID	Primary VNID	Secondary VNIDs	Туре	IP Address	MAC Address	Remote IP	Remote MAC	UDP Port	Egress Port	Ingress Port	Tunnel VLAN ID	
1	1234	C	vxlan-rx-only	20.20.20.20	f2:93:c5:e5:30:44	20.20.20.15		4789	2	1		×

Secondary VNIDs may be added to the tunnel.

16. Select the Secondary VNID edit icon.

The VNIDs panel will be displayed

- 17. Enter the desired Secondary VNID.
- 18. Select +.

The vxlan-rx-only tunnel with the Secondary VNID will be displayed on the Tunnels panel. The tunnel may be deleted by selecting the red X. However, all Secondary VNIDs must be removed first.

### Tunnels

Create Tun	inel											
												_
Tunnel ID	Primary VNID	Secondary VNIDs	Туре	IP Address	MAC Address	Remote IP	Remote MAC	UDP Port	Egress Port	Ingress Port	Tunnel VLAN ID	

19. Select the Secondary VNID edit icon.

The VNIDs panel will be displayed.

- 20. Select the red X for each Secondary VNID.
- 21. The tunnel may be deleted by selecting red X.

### Encapsulate I2GRE Packets (GRE-TX Only)

When a packet is encapsulated with a I2GRE header the new I2GRE header segments are added to the original packet. The I2GRE header segments consists of Ethernet II, IPv4 and I2GRE as shown below.

Original Packet
ETH II IPv4 Packet Data







1. Select Tunnels.

The Tunnels panel will be displayed.

2. Select Create Tunnel.

The Create Tunnels panel will be displayed.

3. Add an ingress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Ingress panel and release.

Create Tunnel				
Ports 01 03 05 07 02 04 06 08	09 11 13 15 17 10 12 14 16 18	19     21     23     25       20     22     24     26	i 27 29 31 33 i 28 30 32 34	35     37     39     41     43       36     38     40     42     44
Port 01 X	Configure 🗲	Egress	Clear Save Back	

4. Add an egress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Egress panel and release.

Create Tunnel		
Ports 01 03 05 07 09 11 13 15 17 02 04 06 08 10 12 14 16 18	) 19 21 23 28 20 22 24 26	52729313335373941435283032343638404244
Ingress Port 01 X	Egress Port 02 X	Clear Save Back

5. Select Configure.



The Configure panel will be displayed.

- 6. Select GRE TX Only.
- 7. Enter the Tunnel IP Address, (I2GRE Header SIP).
- 8. Enter the Remote IP Address, (I2GRE Header DIP).
- 9. Enter the Remote MAC Address, (I2GRE Header DMAC).
- 10. Enter the Key, (1-16777215).

The default I2GRE Header SMAC is automatically defined by the system. There are five predefined SMACs.

- 11. Select Advanced to select an alternative SMAC or to manually enter the SMAC.
- 12. Select Advanced to add a VLAN ID, optional, (1-4095).
- 13. Select Set.
- 14. Select Cancel to disregard.
- 15. Select Save.

The gre-tx-only tunnel will be displayed on the Tunnels panel.

### Tunnels

Create Tur	nnel											
Tunnel ID	Primary VNID	Secondary VNIDs	Туре	IP Address	MAC Address	Remote IP	Remote MAC	UDP Port	Egress Port	Ingress Port	Tunnel VLAN ID	
1	3456		gre-tx-only	30.30.30.30	f2:93:c5:e5:30:44	30.30.30.15	f0:93:c5:a1:b2:c3		2	1		x

16. The tunnel may be deleted by selecting red X.

### Decapsulate I2GRE Packets (GRE-RX Only)

When a I2GRE packet is decapsulated the I2GRE header segments are removed from the packet.

		I2GRE End	capsulated Pa	cket	
ETH II	IPv4	I2GRE	ETH II	IPv4	Packet Data
		I2GRE Dec	capsulated Pa	cket	
	ETH	II IPv4	Packe	t Data	

1. Select Tunnels.

### The Tunnels panel will be displayed.

Garland Technology | 716.242.8500 | garlandtechnology.com/support Copyright © 2023 Garland Technology, LLC. All rights reserved.



### 2. Select Create Tunnel.

The Create Tunnels panel will be displayed.

3. Add an ingress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Ingress panel and release.

### **Create Tunnel**

01       03       05       07       09       11       13       15       17         02       04       06       08       10       12       14       16       18	19     21     23     25       3     20     22     24     26	52729313335373941436283032343638404244
Ingress Configure   Port 01	Egress	Clear Save Back

4. Add an egress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Egress panel and release.

Create	Tunnel
orcalc	runner

Ports 01 03 05 07 02 04 06 08	09 11 13 15 17 10 12 14 16 18	19 21 23 25 20 22 24 26	i 27 29 31 33 35 37 39 41 43 i 28 30 32 34 36 38 40 42 44
Ingress Port 01 X	Configure 🗲	Egress Port 02 X	Clear Save Back

5. Select Configure.

The Configure panel will be displayed.

- 6. Select GRE RX Only.
- 7. Enter the Tunnel IP Address, (I2GRE Header DIP).



- 8. Enter the Remote IP Address, (I2GRE Header SIP).
- 9. Enter the Key, (1-16777215).

The default I2GRE Header SMAC is automatically defined by the system. There are five predefined SMACs.

- 10. Select Advanced to select an alternative DMAC or to manually enter the DMAC, (I2GRE Header DMAC).
- 11. Select Advanced to add a VLAN ID, optional, (1-4095).
- 12. Select Set.
- 13. Select Cancel to disregard.
- 14. Select Save.

The gre-rx-only tunnel will be displayed on the Tunnels panel.

-	_				
		n	n		0
	L			e	5
		•••	•••	~	-

Crea	ate Tunr	nel											
Tunr	el ID	Primary VNID	Secondary VNIDs	Туре	IP Address	MAC Address	Remote IP	Remote MAC	UDP Port	Egress Port	Ingress Port	Tunnel VLAN ID	
	1	4567		gre-rx-only	40.40.40.40	f2:93:c5:e5:30:44	40.40.40.25			2	1		x

15. The tunnel may be deleted by selecting red X.

### **Filter Template**

Filter templates may be created as a pass all, pass by or deny by. Pass by and deny by templates may include multiple matching options to filter traffic. The options are considered by the system as (and) options. Thus, for traffic to pass or be denied it must match all defined options. Once a template is created it will appear on the Create Config Map panel and may be used to create an ingress or egress filter. Template options may be modified when applied to a config map. Any option modification made will not change the original template. It is advisable to rename a filter applied to a config map if the original template options were modified.

1. Select Filter Templates.

The Filter Templates panel will be displayed.

2. Select Create Template.

The Create New Filter Template panel will be displayed.

- 3. Enter the template name. If no name is entered the system will automatically apply a name as follows, tmplt, tmplt(2), tmplt(3), etc.
- 4. Enter the description, optional.
- 5. Select the Template Type, Pass All, Pass By or Deny By.
- 6. If pass by or deny by was selected in Step 5, the options will be displayed as follows.



Source MAC Address / Source MAC Mask Destination MAC Address / Destination MAC Mask Ether Type Source IPv4 Address / Source IP Mask Destination IPv4 Address / Destination IP Mask Source IPv6 Address / Source IP Mask Destination IPv6 Address / Destination IP Mask Inner VLAN ID

Outer VLAN ID DSCP IP Protocol L4 Source Port or Range L4 Destination Port or Range

7. Select Save Template.

The new filter template will appear on the Filter Templates panel.

- 8. Select Cancel to disregard changes and return to the Filter Templates panel.
- 9. Select the template name to modify the template.
- 10. Select the red X to delete the template.

### Load Balancing Group

Load balancing groups are used as an egress option on config maps. The traffic applied to the ports assigned to a load balancing group will follow the hashing per the load balancing policy. Ports may be added or removed from load balancing groups as desired. However, if ports are added or removed from a load balancing group that is used in a config map, the config map load balancing group will be also modified, the reverse is also applied. Previously created load balancing groups will be displayed on the Create Config Map panel.

1. Select Load Balancing Groups.

The Load Balancing Groups panel will be displayed.

2. Select Create Group.

The Create New Load Balance Group panel will be displayed.

- 3. Enter the name. If no name is entered the system will automatically apply a name as follows, lbg, lbg(2), lbg(3), etc.
- 4. Enter the description, optional.
- 5. Add ports by placing the cursor on the desired port. Press the left mouse button. Drag the port to the New L.B. Group panel and release. Repeat for all desired ports. Ports may be added in any combination.
- 6. Remove a port by placing the cursor on the port in the New L.B. Group panel and double press the left mouse button.



- 7. Select Save.
- 8. Select Cancel to return to the Load Balancing Groups panel.

The load balancing group will be displayed on the Load Balancing Groups panel. The assigned ports will also be displayed.

- 9. Edit the load balancing group by selecting the Edit for the desired group.
- 10. Deleted the load balancing group by selecting the red X. Load balancing groups may not be deleted if used on a config map.

# Load Balancing Policy

The load balancing policy determines the hashing applied to all load balancing groups, taps in the load balance mode and the ATLB2 chained mode. The load balancing policy options are as follows:

IPv4 Source	L4 Source Port
IPv4 Destination	L4 Destination Port
IPv6 Source	MAC Source
IPv6 Destination	MAC Destination

1. Select Load Balancing Policy.

The Load Balancing Policy panel will be displayed.

- 2. Select or deselect the desired load balancing policy options.
- 3. Select Save to save updates.
- 4. Select Cancel to disregard changes.

### Config Map

Config maps are unidirectional connections between ingress port(s) to egress port(s) and/or a load balancing group.

1. Select Configuration Maps.

The Packet Broker Configurations panel will be displayed.

2. Select Create Config Map.

The Create Config Map panel will be displayed. Any previously created load balancing groups or filter templates will be displayed along with the new options. Any port shaded gray can be used for a config map, any port shaded black may not be used.



# User Guide EdgeLens | INT10G8XX56-SP | 4.29.2

	) Dashboard Packet Broker Port Info System
Configuration Maps	Back To Map List
Tunnels	
Filter Templates	Name: • 🗸
Load Balancing Groups	Description: • 🖌
Load Balancing Policy	Available Filters 1024/1024 Available Egress Filters 512/512
	Ports 01 03 05 07 09 11 13 15 17 19 21 23 25 27 29 31 33 35 37 39 41 43 02 04 06 08 10 12 14 16 18 20 22 24 26 28 30 32 34 36 38 40 42 44
	Load Balancing Groups
	Filter Templates New
	Ingress     Filter     Egress     Clear Map       Save     Reset

- 3. Select the name pencil to apply a name, optional. If no name is entered the system will automatically apply a name to the config maps as follows, map, map(1), map(2) etc.
- 4. Enter the desired name.
- 5. Select the Check to apply.
- 6. Select the No to disregard.
- 7. Select the Description pencil to apply a description, optional.
- 8. Enter the desired description.
- 9. Select the Check to apply.
- 10. Select the No to disregard.

### Ingress

1. Add an ingress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Ingress panel and release. Ports may be added in any combination. If multiple ports are added, then the traffic from all ingress ports will be aggregated.



Figure 29 Ingress



2. Remove a port by selecting red X.

Figure 30 Filter

Figure

### Filter

1. Add filters by placing the cursor on the desired filter template. A previously created filter template or the new filter template option may be selected. Press the left mouse button. Drag the filter template to the Filter panel and release. The filter template will become an actual filter once the config map is saved.

Filters may be added in any combination. If multiple filters are added, then the top filter is the highest priority. The filters are considered from top to bottom. A filter may be selected and moved up or down depending on priority preference.

IngressPort 17Port 20XPort 22X	Filte Filte	Filter r_1 7 × r_2 7 ×	
31 Filter System Consideratio Priority 1	ns Filter_1 🐺 🗙	Filter options (au	nd)
Priority 2	(or) Filter_2 7 × (or)	Filter options (a	nd)
Priority 3	Filter_3 🛛 🍸 🗙	Filter options (a	nd)

2. Filter templates may be modified by selecting the green filter icon for the desired template.

The Edit Filter panel will be displayed. Any option modification made will not change the original template. It is advisable to rename a filter if the original filter template options were modified.



- 3. Enter the filter name, optional. If no name is entered the system will automatically apply a name to the filter as follows, iFlt, iFlt(2), iFlt(3) etc.
- 4. Select Accept.
- 5. Select Cancel to disregard.
- 6. Remove a Filter Template by selecting the red X.

### Egress

1. Add an egress port by placing the cursor on the desired port. Press the left mouse button. Drag the port to the Egress panel and release. Repeat for all desired ports. If multiple ports are added, then 100% of the traffic will be sent to each port.

#### Figure 32 Egress Port(s)



2. Add a load balancing group by placing the cursor on a previously created load balancing group or new load balancing group. Press the left mouse button. Drag the load balancing group to the Egress panel and release. Ports may be added or removed from any load balancing group. If ports are added or removed from a previously created load balancing group, the original load balancing group will also be modified.



#### Figure 33 Egress Load Balancing Group



3. One load balancing group plus separate port(s) may be applied. The traffic applied to the ports assigned to the load balancing group will follow the hashing per the load balancing policy. 100% of the traffic will be sent to each of the separate port(s).

Figure 34 Egress Load Balancing Group and Port(s)



4. Remove a port or load balancing group by selecting the red X.

### **Egress Filter**

1. Select the gray filter icon on the desired egress port.

### Figure 35 Egress Filter



The Port XX Egress Filters panel will be displayed.

2. Add filters by placing the cursor on the desired filter template. A previously created filter template or the new filter template option may be selected. Press the left mouse button. Drag the filter template to the Port XX Egress Filters panel and release. The filter template will become an actual egress filter once the config map is saved.



Filters may be added in any combination. If multiple filters are added, then the top filter is the highest priority. The filters are considered from top to bottom. A filter may be selected and moved up or down depending on priority preference.

#### Figure 36 Port XX Egress Filters



#### Figure 37 Egress Filter System Considerations



- 3. If new is selected, the Edit Filter panel will be displayed.
- 4. Enter the filter name, optional. If no name is entered the system will automatically apply a name to the egress filter as follows, eFItPXX, eFItPXX(2), eFItPXX(3) etc.
- 5. Select Accept.
- 6. Select Cancel to disregard.
- 7. Remove a filter template by selecting the red X.

#### **Config Map Save**

1. Select Save to save the current configuration.

The "Save this configuration? (May take a few seconds.)" panel will be displayed.

- 2. Select OK to save the Config Map.
- 3. Select Cancel to disregard.



	) Dashboa	ard Pa	cket Broker	r Port Infe	o System							
Configuration Maps	Packe	t Brol	ker Co	onfigura	ations							
Tunnels												
Filter Templates	System Filters Resource											
Load Balancing Groups	Filters	Max 1024	U 2	Jsed	Available 1022							
Load balancing Groups	Egress Filt	ers 512	0	)	512							
Load Balancing Policy												
	Save	Refresh	Clear	Counters	Create Co	nfig Map	Filter Templa	ates	Delete Selected			
	Enable E	Priority I	Jame Ingr	ress Ports	Eilter Match	Edrace Porte	View		Set Priority	Edit	Delete	
	Enable P	nonty r	vanne mgr	Tess Ports	-inter match	Egress Ports	Counts		Set Fliolity	Eun	(select all 🗌 )	
	×	1	map 01	02 03	0	11 12 13	-di	^	<ul> <li>✓ Set</li> </ul>	Ø		

### Modify a Config Map

1. Modify a config map by selecting the Edit icon. Modifications may be made using the create sections previously discussed.

	⊃ Dashboard	Packet	Broker Port li	nfo Systen									Welcom	e admin	Log or
Configuration Maps	Packet E	Broker	Configu	rations											
Tunnels			9												
Filter Templates	System Filters	Resource	e		_										
Load Balancing Groups	Filters	Max 1024	2 Used	Available 1022											
Load Balancing Policy	Egress Filters	512	0	512											
	Save	fresh	Clear Counters	Create Co	nfig Map	Filter Templa	Delete Selected								
	Enable Prior	ity Name	Ingress Ports	Filter Match	Egress Ports	View Counts	Set Priority	Edit	Delete (select all )						
	1	map	01 02 03	0	11 12 13	di	∧ ∨ Set	Ø							

### **Config Map Statistics**

Config map statistics are displayed in the filter match column for each config map. The number displayed represents all packets that have passed through the config map.

- 1. Select Refresh to refresh the config map statistics.
- 2. Select Clear Counters to clear and refresh the config map statistics.
- 3. Select the View Counts icon to display individual statistics for ingress ports, filters, egress ports and load balancing group ports.





- 4. Select Refresh Counts to refresh the statistics.
- 5. Select Clear Counts to clear and refresh the statistics.
- 6. Select the Egress Filter icon to display the statistics.



- 7. Select Refresh Counts to refresh the statistics.
- 8. Select Clear Counts to clear and refresh the statistics.

### **Delete Config Map**

1. Select the Delete in the Delete column for the desired config map(s).

- 2. The Select All option may be selected to delete all config maps.
- 3. Select Delete Selected.

### **Config Map Priority**

The config map priority needs to be considered when the same ingress port(s) is used in multiple config maps to send traffic to multiple egress options, different port(s) or load balancing groups. In this case, the config map with the highest priority will be considered first. In the following example there are three config maps with ingress port 1. The Traffic\_A config map is the highest priority 1, the Traffic\_B config map is the next priority 2 and finally the Traffic\_C is the next priority 3. The Priority of a config map may be changed to a higher or lower value using two methods.



	⊃ Dashl	board	Packet Bro	ker Port Info	o System							
Configuration Maps	Pack	et Bro	oker C	Configura	ations							
Tunnels				0								
Filter Templates	System	Filters R	esource									
Load Balancing Groups	Filters	M 11 Filters 5	lax 024 12	<b>Used</b> 3	Available 1021 512							
Load Balancing Policy	Lgress	inters o	14	0	012							
	Save	Refres	sh Cl	ear Counters	Create Config	g Map Filte	er Template	s	Delete S	Selected		
	Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	:	Set Prio	rity	Edit	Delete (select all 🗌 )
	×	1	Traffic_A	01	0	02	di	^	~	Set	ø	
	1	2	Traffic_B	01	0	03	di	^	~	Set	ø	
	1	3	Traffic_C	01	0	03	di	^	~	Set	ø	

#### Figure 38 Config Map System Considerations



#### Method 1

- 1. Select the up or down arrow for the config map.
- 2. Select Save to save updates.

#### Method 2

1. Select Set.

The Set Priority panel will be displayed.

- 2. Enter the priority in the Set New Priority panel.
- 3. Select Set to accept the priority value.
- 4. Select Cancel to disregard.
- 5. Select Save to save updates.

#### Enable/Disable Config Map

Config maps may be enabled or disabled as desired. If a config map is enabled, it is in the database and available for traffic. If a config map is disabled, it is in the database and not available for traffic. If the config map has a green check, then it is enabled. If the config map has a red dash, then it is disabled.



	Dashb	oard	Packet Bro	ker Port Info	o System							
Configuration Maps	Pack	et Bro	oker C	Configura	ations							
Tunnels				0								
Filter Templates	System I	Filters Re	esource									
Load Balancing Groups	Filters	10	1 <b>ax</b> 024	Used 3	Available 1021							
Load Balancing Policy	Egress F	ilters 5	12	0	512							
	Save	Refres	sh Cl	ear Counters	Create Confi	g Map Filte	r Template	s	Delete S	Selected		
	Enable	Priority	Name	Ingress Ports	Filter Match	Egress Ports	View Counts	ş	Set Prior	rity	Edit	Delete (select all )
	×	1	Traffic_A	01	0	02	di	^	<b>~</b>	Set	ø	
	-	2	Traffic_B	01	0	03	di	^	~	Set	ø	
	× .	3	Traffic_C	01	0	03	di	^		Set	ø	

### **Disable Config Map**

1. Select the green check for the config map in the Enable column.

The green check will change to a red dash.

2. Select Save.

### **Enable Config Map**

1. Select the red dash for the config map in the Enable column.

The red dash will change to a green check.

2. Select Save.

# 4. Port Info

The following configuration options may be displayed or modified under the Port Info panel.

Port Number	Mode
Port Description	SFP Data
Link	VLAN Tag
Set Speed	VLAN Strip
Speed	Port Statistics



### 1. Select Port Info on the Dashboard menu bar.

Garland Technology | 716.242.8500 | garlandtechnology.com/support Copyright © 2023 Garland Technology, LLC. All rights reserved.



# User Guide EdgeLens | INT10G8XX56-SP | 4.29.2

See every bit, byte, and packet	⊃ Dashb	oard	Packet Broker	Port Info	System									Welcome adr	nin Log	out
Port Configuration		Port	Configur	ation												
Port Statistics	Savo	Port	Description	Link	Set Speed	Speed	Mode	SFP Data	VLAN Tag	VLAN Strip	Split					
	Refresh	1	port01	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV								
		2	port02	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV		0						
		3	port03	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV								
		4	port04	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV		0						
		5	port05	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV								
		6	port06	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV								
		7	port07	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV		0						
		8	port08	•	10G 🗸	10G	Normal 🗸	FINISAR CORP. FTLX8574D3BCV								
		9	port09	•	10G 🗸	10G	Normal 🗸	OEM GL-10GSFP-SR								
		10	port10	•	10G 🗸	10G	Normal 🗸	GARLAND TECH SFP+SR								
		11	port11	•	10G 🗸	10G	Normal 🗸	OEM GL-10GSFP-SR		0						
		12	port12	•	10G 🗸	10G	Normal 🗸	OEM GL-10GSFP-SR								
		13	port13	•	10G 🗸	10G	Normal 🗸	OEM GL-10GSFP-SR								
		14	port14	•	10G 🗸	10G	Normal 🗸	GARLAND TECH SFP+SR		0						
		15	port15	•	10G 🗸	10G	Normal 🗸	OEM GL-10GSFP-SR								

The Port Configuration panel will be displayed.

# **Port Configuration**

The port configuration is displayed by default. The Description, Set Speed and Mode may be modified. All other options are displayed only. However, they may be updated by selecting Refresh.

### **Port Description**

1. Modify the port description by placing the cursor on Port Description for the desired port and press the left mouse button.

The Edit Description panel will be displayed.

- 2. Place the cursor in the description field and enter the new description.
- 3. Select Set to save updates.
- 4. Select Cancel to return to the Port Configuration panel.

### Set Speed

- 1. Modify the port speed by selecting the pull-down panel for the desired port.
- 2. Select the desired speed.
- 3. Select Save to save updates.



### Mode

- 1. Modify the port mode by selecting the pull-down panel for the desired port.
- 2. Select the desired mode. The available port modes are Normal, Loopback, Listen Only and Force Link.
- 3. Select Save to save updates.

### **Port Statistics**

The following statistics may be displayed on the Port Statistics panel.

Port number	Receive Errors	Transmit Errors
Receive Packets	Transmit Packets	
Receive Discards	Transmit Discards	

1. Select Port Statistics on the Port Configuration panel.

The Port Statistics panel will be displayed.

- 2. Update the statistics by selecting Refresh.
- 3. Clear and refresh the statistics by selecting Clear.

### VLAN Tag

VLAN tag applies a VLAN ID to the packets when the port is configured as an ingress port on a config map.

- 1. Select the VLAN Tag enable option for the desired port.
- 2. Enter the desired VLAN ID, (1-4094).
- 3. Select Save.
- 4. Disable by deselecting the VLAN Tag option for the desired port.
- 5. Select Save.

### **VLAN Strip**

VLAN strip removes the outer VLAN ID for packets when the port is configured as an egress port on a config map.

- 1. Select the VLAN Strip option for the desired port.
- 2. Select Save.
- 3. Disable by deselecting the VLAN Strip option for the desired port.
- 4. Select Save.