

This document describes the procedure to upgrade the AF25G80D.

- From AggregatorOS-AF25G80D-v3.0.15-en.bin
- To AggregatorOS-AF25G80D-v3.0.16.r1-en.bin

Save the Configuration

The Advanced Features unit has two configuration files:

- running-config.conf
- startup-config.conf

The running-config.conf contains the current configuration that includes any configuration changes that have been made. The configuration changes are not automatically saved/updated to the startup-config.conf. The startup-config.conf is loaded when the unit is rebooted or power cycled. The startup-config.conf must be manually saved/updated.

1. Login to the GUI, (admin/gtadmin1).
2. Select Reboot/Save.
3. Select Save configuration.

The Confirm panel will be displayed.

4. Select Yes.

A Save Successful message will be displayed.

Upload and Upgrade (3.0.16.r1)

1. Select System Management.
2. Select Update Management.
3. Select the Select image file (Upload files to boot) Choose File.
4. Select the AggregatorOS-AF25G80D-v3.0.16.r1-en.bin firmware.
5. Select Open.
6. Select Upload only.
7. Verify the upload was successful and the activity bar turns green.

8. Select File Management.
9. Select the Boot files tab.
10. Select the under the Options column for the AggregatorOS-AF25G80D-v3.0.16.r1-en.bin firmware.

A will appear under the Next startup image column.

11. Select Reboot/Save.
12. Select Reboot.
13. Select Yes.

The unit will reboot and load the AggregatorOS-AF25G80D-v3.0.16.r1-en.bin firmware.

Verify the Upgrade (3.0.16.r1)

1. Login to the GUI, (admin/gtadmin1).
2. Verify on the Device Summary display.

Software Version	AggregatorOS-3.0.16.r1
Image Name	AggregatorOS-AF25G80D-v3.0.16.r1-en.bin

Delete the Firmware (3.0.15)

1. Login to the GUI, (admin/gtadmin1).
2. Select System Management.
3. Select File Management.
4. Select the Boot files Tab.
5. Select the Trash Can in the Options column for the AggregatorOS-AF25G80D-v3.0.15-en.bin firmware.