






This document describes the front panel, LED indications, interfaces, rear panel, rear switch and installation procedure for the P10GSFPA. The unit supports five application modes; bypass, breakout, aggregate, span and span packet inject. LFP and Fail Mode (open) are supported on the network ports for the bypass, breakout and aggregate modes.

# **Front Panel**

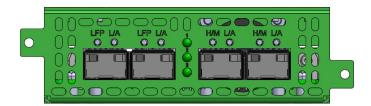

# **LED Indications**

Port 1 LFP	LFP LED			
Port 1 L/A	Link/Activity LED			
Port 2 LFP	LFP LED			
Port 2 L/A	Link/Activity LED			
Port 3 H/M	N/A			
Port 3 L/A	Link/Activity LED			
Port 4 H/M	N/A			
Port 4 L/A	Link/Activity LED			
LED 1	Bypass Mode Bypass LED			
LED 2	N/A			
LED 3	N/A			

# **Interfaces**

Port 1 Port 2 Port 3 Port 4	Network Port Network Port Inline Appliance Port Inline Appliance Port
Port 1 Port 2 Port 3 Port 4	Network Port Network Port Breakout Port Ingress Port 1 Breakout Port Ingress Port 2
Aggregate Mode Port 1 Port 2 Port 3 Port 4	Network Port Network Port Aggregate Port Ingress Port 1 / Port 2 Aggregate Port Ingress Port 1 / Port 2







Span Mode			
Port 1	Network Port	Ingress Span Port 2 / Port 3 / Port 4	
Port 2	Span Port	Ingress Port 1	
Port 3	Span Port	Ingress Port 1	
Port 4	Span Port	Ingress Port 1	
Span Packet Inject Mode			
Port 1	Network Port	Ingress Span Port 2 / Port 3 / Port 4	
	Network Port	Egress Packet Inject Port 2 / Port 3 / Port 4	1
Port 2	Span Port	Ingress Port 1	
	Packet Inject F	Port Egress Port 1	
Port 3	Span Port	Ingress Port 1	
	Packet Inject F	Port Egress Port 1	
Port 4	Span Port	Ingress Port 1	
	Packet Inject F	Port Egress Port 1	

# **Rear Panel**



PS1	Power Supply 1 LED
PS2	Power Supply 2 LED

# **Rear Panel Switch Settings**

Switch 1	Port Speed	On - 10G		Off – 1G	
Switch 2	LFP	On - E	Enabled Off – [	Disabled	
Switch 3/4/5	Mode	Bypass	3 – Off	4 – Off	5 – Off
		Breakout	3 – On	4 – Off	5 – Off
		Aggregate	3 – Off	4 – On	5 – Off
		Span	3 – On	4 – On	5 – Off
		Span (PI)	3 – Off	4 – Off	5 – On
Switch 6/7/8	N/A	N/A	6 – Off	7 – Off	8 – Off

<sup>\*</sup> LFP is not supported for 1G and 10G copper applications. Switch 2 Off.

<sup>\*</sup> The unit must be power cycled if the switch settings are modified.



# User Guide

EdgeSafe | P10GSFPA | 4.22.1

#### Installation Procedure

- 1. The P10GSFPA may be installed in any available 1U slot of a network rack and secured with rack mount screws or in the optional rack mount bracket, sold separately. The optional rack mount bracket is shown below.
- 2. Set the switches on the rear of the unit for the desired speed, LFP option and application.
- 3. Connect power cables to PS1 and PS2 on the rear panel and plug into available power sources.
- 4. Verify that the PS1 LED and PS2 LED on the rear panel are illuminated.
- 5. Insert the correct SFPs for the desired speed and application. This step can be done prior to power on if desired.
- 6. Connect the cables or fibers to the desired ports per the application.
- 7. Verify the L/A LEDs are illuminated green indicating link.
- 8. Verify the L/A LEDs are flashing green indicating link and traffic.

# **Optional Rack Mount Bracket**

